



WiComm-1

User's Guide

Ver 1.0b
2008. 09. 09



Revision History

Revision Date	Document Version	Pages	Description
Feb, 13, 2007	1.0a	All	Context amendment by shlee
Sept, 9, 2008	1.0b	All	Roaming Added by shlee

A-Class Device Product

This device is registered only for office use, and both the seller and the user must be aware of this.
If not correctly sold or purchased, please exchange with home use device.

Table of Contents

Chapter 1. Introduction.....	1-1
1.1 About This Document.....	1-1
1.2 Target Audience	1-1
1.3 Guide Content and Organization.....	1-2
1.4 WiComm-1 Document.....	1-3
1.5 Technical Supports	1-3
Chapter 2. Getting Started.....	2-1
2.1 Overview	2-1
2.2 Features	2-1
2.3 Package	2-2
2.4 Applications.....	2-3
Chapter 3. Hardware Description.....	3-1
3.1 WiComm-1	3-1
3.1.1 Exterior View	3-1
3.1.2 Part Name	3-2
3.2 Connector Specification	3-3
3.2.1 DB9 Connector Specification	3-3
3.2.2 RJ-45 Ethernet Specification.....	3-6
3.2.3 Power Connector.....	3-6
3.2.4 Terminal Block Power Connector	3-7
3.3 LED Specification	3-8
3.4 Reset Button	3-9
3.5 Wireless antenna	3-10
Chapter 4. Installation.....	4-1
4.1 Connecting the PC	4-1
4.1.1 Connecting the LAN Cable.....	4-1
4.1.2 Connecting the Serial Cable	4-1
4.1.3 Connecting the power adapter	4-2
4.2 WiComm-1 Access and Environment Setting	4-2
4.2.1 Network Setting for a PC.....	4-2
4.2.2 Environment Setting.....	4-3
4.3 Checking the Operation	4-4
4.3.1 Checking Serial Port Operation.....	4-4
4.3.2 Checking Wireless LAN Operation.....	4-6
Chapter 5. Setting via Web.....	5-1
5.1 Accessing the Web	5-1
5.2 Setup Menu.....	5-2
5.3 Network Settings	5-3

5.4	Serial Settings	5-6
5.5	Wireless Settings	5-10
5.6	Admin Settings	5-14
5.7	Change Password.....	5-16
5.8	Update Firmware.....	5-17
5.9	Factory Default.....	5-18
5.10	Save & Reboot	5-19
Chapter 6.	Setting via Telnet	6-1
6.1	Telnet Connection	6-1
6.2	Setup Commands	6-2
6.3	View Commands	6-3
6.4	Network Command	6-4
6.4.1	Setting Wireless Network	6-4
6.4.2	Setting Ethernet.....	6-4
6.4.3	Setting Management	6-5
6.5	Serial Commands.....	6-6
6.6	Wireless Network Commands.....	6-8
6.6.1	Command List	6-8
6.6.2	Setting WEP	6-9
6.7	Management Setting.....	6-10
6.8	System Commands.....	6-10
Chapter 7.	Setting Guide for each Configuration	7-1
7.1	Preparation for the Environment Setting	7-1
7.1.1	PC Network Setting	7-1
7.1.2	Ping Test.....	7-2
7.1.3	Access to a Web Server.....	7-4
7.2	Connecting to Access Point (Infrastructure Mode).....	7-5
7.2.1	Logging on the WiComm-1	7-6
7.2.2	Network Settings	7-7
7.2.3	Serial Settings	7-8
7.2.4	Wireless Settings.....	7-9
7.2.5	Save & Reboot	7-10
7.2.6	Serial Loopback Test	7-10
7.3	Connecting in Serial to Serial by Using Two WiComm-1 Systems (Ad-Hoc Mode)	7-11
7.3.1	Logging on to the WiComm-1	7-12
7.3.2	Network Settings (Server)	7-13
7.3.3	Serial Settings (Server)	7-14
7.3.4	Wireless Settings (Server)	7-15
7.3.5	Save & Reboot (Server)	7-16
7.3.6	Network Settings (Client)	7-17
7.3.7	Serial Settings (Client).....	7-18
7.3.8	Wireless Settings (Client)	7-19

7.3.9	Save & Reboot (Client).....	7-20
7.3.10	Operation Test	7-21
7.4	Connecting the WiComm-1 to a Wireless PC LAN (Ad-Hoc Mode).....	7-22
7.4.1	Logging on to the WiComm-1	7-23
7.4.2	Network Settings	7-24
7.4.3	Serial Settings	7-25
7.4.4	Wireless Settings.....	7-26
7.4.5	Save & Reboot	7-27
7.4.6	Serial Loopback Test	7-27
7.5	Security Setting	7-28
7.5.1	WEP Mode	7-28
Chapter 8.	Appendix	8-1
8.1	Updating Firmware	8-1
8.1.1	Firmware Update via TFTP	8-3
8.2	Troubleshooting.....	8-5
8.2.1	Troubleshooting for Installation	8-5
8.2.2	Troubleshooting for Setting Networks	8-5
8.2.3	Troubleshooting for Setting Ports.....	8-5
8.2.4	Troubleshooting for Setting Wireless Networks	8-6
8.3	Product Specifications.....	8-7
8.4	FCC Statement.....	8-9

List of Figures

Figure 2-1. WiComm-1's Package	2-2
Figure 3-1. WiComm-1 Exterior Dimension.....	3-1
Figure 3-2. WiComm-1 Part Name	3-2
Figure 3-3. DB9 Serial Connector	3-3
Figure 3-4. 3-Pin-Jumper Header.....	3-4
Figure 3-5. Terminal Block.....	3-7
Figure 3-6. Top's LED.....	3-8
Figure 3-7. Bottom's LED	3-9
Figure 3-8. Reset Button	3-9
Figure 3-9. Wireless antenna	3-10
Figure 4-1. PC Network Setting Window	4-2
Figure 4-2. Serial Setting Window	4-4
Figure 4-3. Test Data Display Window	4-5
Figure 4-4. Wireless Status Window	4-6
Figure 5-1. Initial Window for WiComm-1 Connection	5-1
Figure 5-2. Initial Login Window	5-2
Figure 5-3. Network Setting Window.....	5-3
Figure 5-4. Management Setting Window	5-5
Figure 5-5. Serial Setting Window.....	5-6
Figure 5-6. Wireless LAN Setting Window	5-10
그림 5-7. Wireless Roaming Setting Windows	5-12
Figure 5-7. WEP Setting Window	5-13
Figure 5-10. Admin Settings Setting Window.....	5-14
Figure 5-11. Change Password Setting Window.....	5-16
Figure 5-12. Update Firmware Setting Window	5-17
Figure 5-13. Factory Default Setting Window.....	5-18
Figure 5-14. Save & Reboot Setting Window.....	5-19
Figure 6-1. Telnet Access	6-1
Figure 7-1. Internet Protocol (TCP/IP) Registration Information	7-1
Figure 7-2. Ping Test	7-2
Figure 7-3. Ping Test Result Message	7-2
Figure 7-4. WiComm-1 Web Server Login Window	7-4
Figure 7-5. Connecting to an Access Point (Infrastructure Mode).....	7-5

Figure 7-6. WiComm-1 Summary.....	7-6
Figure 7-7. Infrastructure Mode Network Settings.....	7-7
Figure 7-8. Infrastructure Mode Serial Settings.....	7-8
Figure 7-9. Infrastructure Mode Wireless Settings	7-9
Figure 7-10. Infrastructure Mode Save & Reboot.....	7-10
Figure 7-11. Connecting two WiComm-1 Systems (Ad-Hoc Mode)	7-11
Figure 7-12. WiComm-1 Summary.....	7-12
Figure 7-13. Ad-Hoc Mode Network Settings (Server).....	7-13
Figure 7-14. Ad-Hoc Mode Serial Settings (Server).....	7-14
Figure 7-15. Ad-Hoc Mode Wireless Settings (Server)	7-15
Figure 7-16. Ad-Hoc Mode Save & Reboot (Server).....	7-16
Figure 7-17. Ad-Hoc Mode Network Settings(Client)	7-17
Figure 7-18. Ad-Hoc Mode Serial Settings(Client)	7-18
Figure 7-19. Ad-Hoc Mode Wireless Settings (Client).....	7-19
Figure 7-20. Ad-Hoc Mode Save & Reboot(Client)	7-20
Figure 7-21. Checking the Access in Ad-Hoc Mode.....	7-21
Figure 7-22. Connecting the WiComm-1 to Wireless PC LAN (Ad-Hoc Mode).....	7-22
Figure 7-23. WiComm-1 Summary.....	7-23
Figure 7-24. Ad-Hoc Mode Network Settings.....	7-24
Figure 7-25. Ad-Hoc Mode Serial Settings.....	7-25
Figure 7-26. Ad-Hoc Mode Wireless Settings	7-26
Figure 7-27. Ad-Hoc Mode Save & Reboot.....	7-27
Figure 7-28. WEP Security Setting.....	7-28
Figure 7-29. WEP 64Bit Key Value Setting	7-29

List of Tables

Table 1-1.	WiComm-1 Related Technical Documents	1-3
Table 5-1.	Key Functions of the Setup Menu	5-2
Table 5-2.	Key Functions of Portview Configuration	5-3
Table 5-3.	Key Functions of Wireless Network Configuration	5-4
Table 5-4.	Key Functions of Ethernet Configuration	5-4
Table 5-5.	Key Functions of Management Configuration	5-5
Table 5-6.	Key Functions of Portview Configuration	5-5
Table 5-7.	Key Functions of Serial Settings	5-7
Table 5-8.	Key Functions of Wireless Settings	5-11
Table 5-9.	Key Functions of Wireless Roaming	5-12
Table 5-9.	Key Functions of Wireless Security	5-12
Table 5-10.	Key Functions of WEP Authentication	5-13
Table 5-13.	Key Functions of Admin Settings	5-15
Table 5-14.	Key Functions of Save & Reboot	5-19
Table 6-1.	Basic Setup Commands	6-2
Table 6-2.	View Commands	6-3
Table 6-3.	Serial Commands	6-6
Table 8-1.	Product Specifications	8-7

Chapter 1.Introduction

This chapter is an introduction to SystemBase's wireless device server WiComm-1 and related document.

1.1 About This Document

This guide is designed for users of WiComm-1, who are in charge of connecting to and communicating with WiComm-1, setting WiComm-1's configurations, status monitoring, firmware update, and other administration work.

1.2 Target Audience

This manual is intended for WiComm-1 users and administrators. It is strongly recommended to read carefully before using or setting WiComm-1. This guide contains information on hardware level application and software level configuration. The understanding of this guide will be a great starting point for any administrators who want to easily monitor and control WiComm-1 and its connection devices.

1.3 Guide Content and Organization

[Chapter1. Introduction](#) is a preface with general information and introductory notices.

[Chapter2. Getting Started](#) describes a brief introduction to WiComm-1, including features and applications.

[Chapter 3. Hardware Description](#) explains about the product layout and pin specifications with block diagram and drawings.

[Chapter 4. Installation](#) describes how to connect between WiComm-1 serial and network and how to start the system initially and inspect the system status.

[Chapter 5. Setting via Web](#) provides menu-by-menu guide for wetting up WiComm-1 via web browser.

[Chapter 6. Setting via Telnet](#) describes the commands required for setting for WiComm-1 via telnet.

[Chapter 7. Setting Guide for Each Configuration](#) provides the settings for each configuration, giving representative examples to use WiComm-1.

[Chapter 8. Appendix](#) provides troubleshooting and technical specifications for the product.

1.4 WiComm-1 Document

The following table summarizes documents included in the WiComm-1 document set.

Table 1-1. WiComm-1 Related Technical Documents

Document Name	Description
User Guide	Integration, configuration, and management tasks are explained for the administrator
Portview User Manual	Guide for SystemBase device server management application Portview
COM Port Redirector User Manual	Guide for SystemBase COM Port Redirector

If you need brief information on WiComm-1 or wireless device servers in general, please visit our website at <http://www.sysbas.com/>. You can view and/or download documents related to WiComm-1 as well as latest software and firmware updates. Available resources are as follows:

Document Name	Description
WiComm-1 Spec Sheet	Specifications for WiComm-1 products
WiComm-1 White Paper	An easy reading for anyone new to wireless device server. Deals with background and technology Past, present, and future of wireless device servers along with the overview of market environment
WiComm-1 Application Notes	Usage of WiComm-1 with diagrams and images

Note

All documents are updated promptly, so check for the recent document update. The contents in these documents are subject to change without any notice in advance.

1.5 Technical Supports

There are three ways you can get a technical support from SystemBase.

First, visit our website <http://www.sysbas.com/> and go to 'Technical Support' menu. There you can read FAQ and ask your own question as well.

Second, you can e-mail our technical support team. The mail address is tech@sysbas.com. Any kind of inquiries, requests, and comments are welcome.

Finally, you can call us at the customer center for immediate support. Our technical support team will kindly help you get over with the problem. The number to call is 82-2-855-0501

Chapter 2. Getting Started

This chapter includes WiComm-1 overview, main and distinctive features, package contents for each product, and application fields.

2.1 Overview

WiComm-1 provides wireless network connectivity to various serial devices (security devices, communication peripherals, modems, data printing devices, industrial metering devices, etc.). WiComm-1 supports RS232, RS422, and RS485 serial communication standards under various communication speed, meanwhile connecting to the IEEE 802.11b/g wireless network and auto-sensing 100baseTX Fast Ethernet and 10baseT Ethernet connection.

2.2 Features

WiComm-1's basic function as follow:

- Support IEEE 802.11b/g (Max. 54Mbps)
- Support WEP 64 bit / 128 bit
- Serial Communication Speed Max. 921.6kbps
- Software configurable RS232/422/485 interfaces
- 10/100Mbps Ethernet port
- SystemBase COM Port Redirector for better adaptability
- Extensive configuration and monitoring with Portview
- Firmware upload with Web and FTP
- Configuration with Web, Telnet, SNMP, and Portview
- Support SNMP
- Power supply function using RI pin

2.3 Package

WiComm-1 package is composed of following components. All packages include a WiComm-1 and a CD with utilities and documents. Make sure every component is included with your package.



Box



**Crossover
LAN Cable**



**WiComm-1
Body**



Manual CD



Antenn



Power Adaptor



**Power
Cable**



**Serial
Cable**

Figure 2-1. WiComm-1's Package

2.4 Applications

WiComm-1 can be applied to many practical applications in various fields.

Factory / Industrial Automation

- PLC, Robot arms, Human-Machine Interface, Warehouse rails
- Medical instruments, Inspection equipment controllers, alarming units

Home Appliances / Electronic Devices

- Power controller, Gaming machines
- Scales, Gas detection units, Water & pollution metering devices
- Data collection and distribution units

Financial / Building Automation

- Card readers, Barcode scanners, Kiosks, Point-Of-Sale(POS) related devices
- Serial printers, Cash registers, Credit card authorization terminals
- Biometric detection units, Security devices

Chapter 3. Hardware Description

This chapter provides WiComm-1's hardware block diagram, pin specifications, dimensions and other hardware-related information.

3.1 WiComm-1

WiComm-1 provides an Ethernet LAN port of the RJ-45 connector and can directly access *when wireless network is not working*. In addition, WiComm-1 is, also, a serial port of DB9 connector and a user can select and use a desired serial interface of RS 232/422/485.

3.1.1 Exterior View

The exterior dimension of WiComm-1 is as follows:



Figure 3-1. WiComm-1 Exterior Dimension

3.1.2 Part Name



Figure 3-2. WiComm-1 Part Name

3.2 Connector Specification

3.2.1 DB9 Connector Specification

Pin specifications and signal definition of the DB9 connector are as follows:

1. DB9 Serial Connector

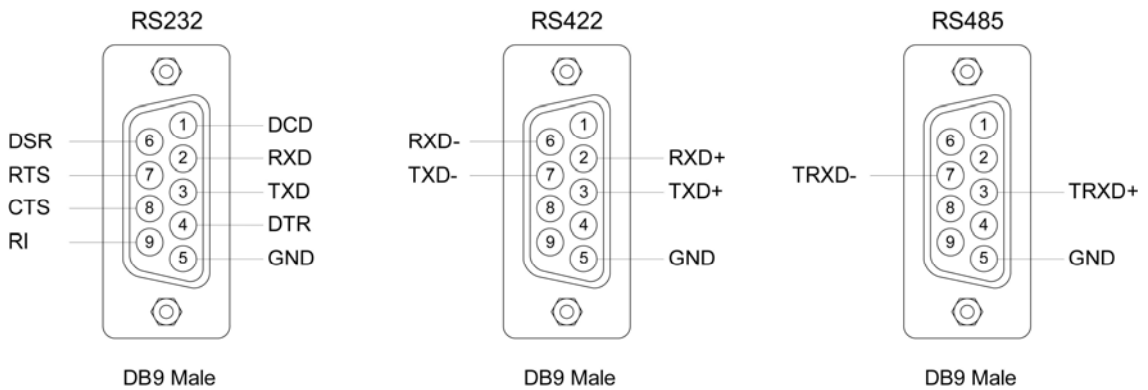


Figure 3-3. DB9 Serial Connector

2. RS232 Signal Specification

Pin	Signal	Description
1	DCD	Data Carrier Detection (Input)
2	RXD	Receive Data (Input)
3	TXD	Transmit Data (Output)
4	DTR	Data Terminal Ready (Output)
5	GND	Ground
6	DSR	Data Set Ready (input)
7	RTS	Request to Send (Output)
8	CTS	Clear to Send (Input)
9	RI	Ring Indicator (Input)

If opening the cover of the product after unfastening clamp screws, there is 3-pin jumper header in the indicated box below. Depending on the connection of this jumper pin, this product operates in Vin or RI.

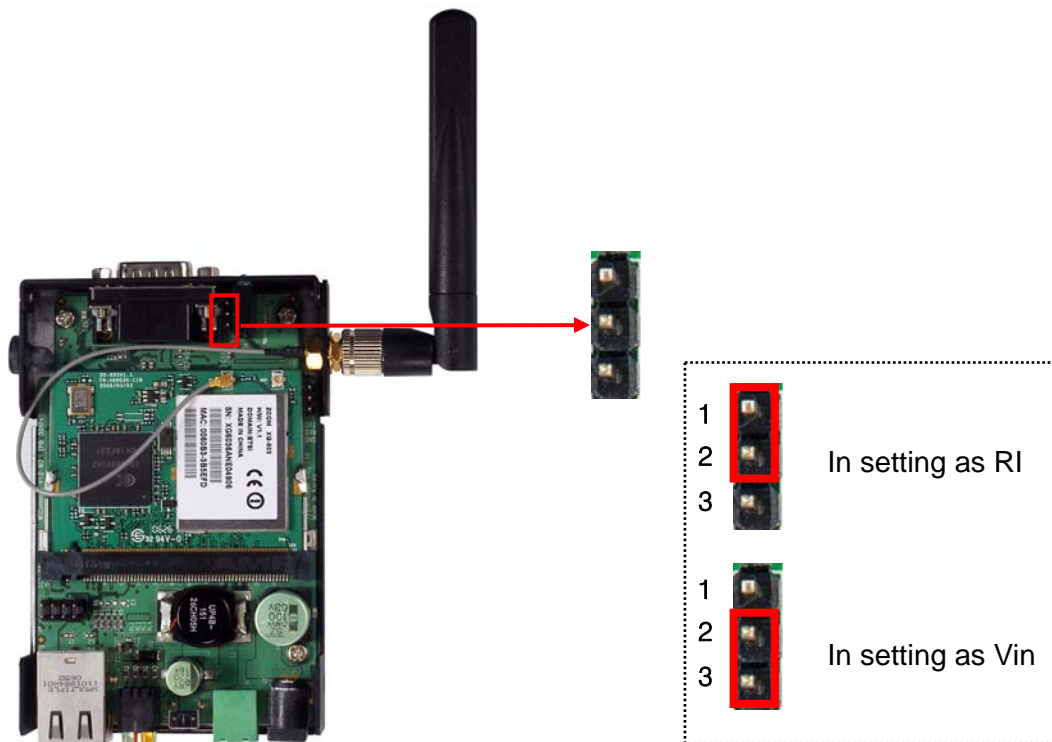


Figure 3-4. 3-Pin-Jumper Header

Mode	Setting	Description
RI	1-2 connection	RI operation
Vin	2-3 connection	Pin 9 in the DB9 serial connector is used for the input.
		DC 9 ~ 48 V(6W) •For 12V DC input: Min. 500mA •For 48V DC input: Min. 125mA


3. RS422 Full Duplex Signal Specification

Pin	Signal	Description
2	RXD+	Receive differential data positive (Input)
3	TXD+	Transmit differential data positive (Output)
6	RXD-	Receive differential data negative (input)
7	TXD-	Transmit differential data negative (Output)

4. RS485 Half Duplex


Pin	Signal	Description
3	TRX+	Transmit/Receive differential data positive
7	TRX-	Transmit/Receive differential data negative

3.2.2 RJ-45 Ethernet Specification

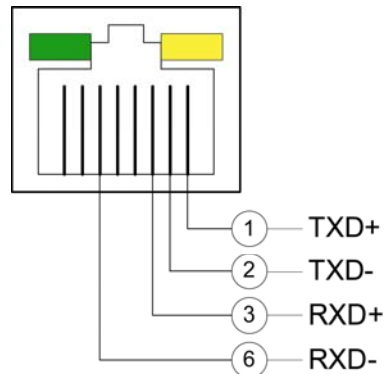

Pin	Signal	Description
1	TXD+	Transmit Data +
2	TXD-	Transmit Data -
3	RXD+	Receive Data +
6	RXD-	Receive Data -
LED		Description
Left Green		For 100Base-TX Link : LED ON For data receive/transmit : LED blinks
Right Yellow		For 10Base-T Link : LED ON For data receive/transmit : LED blinks

3.2.3 Power Connector

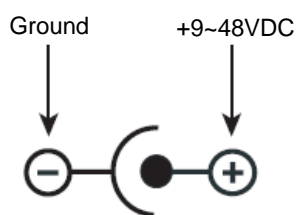

Contact	Polarity
Center	DC 9 ~ 48 V(6W) •For 12V DC input: Min. 500mA •For 48V DC input: Min. 125mA
Outer	Ground

3.2.4 Terminal Block Power Connector

The terminal block power cable is connected as follows:

Left Connector Right Connector



Figure 3-5. Terminal Block

Contact	Polarity
Left	DC 9 ~ 48 V(6W) •For 12V DC input: Min. 500mA •For 48V DC input: Min. 125mA
Right	Ground

3.3 LED Specification

1.Top LED's Specification



Figure 3-6. Top's LED

LED	Status	Description
PWR (Red)	Off	Power is not supplied in this product.
	On	Power is supplied in this product.
RDY (Green)	Off	System Failure
	On	Normal Operation
	Blink	IP Setting
WiFi (Orange)	Off	Inactive of Wireless network
	On	Inactive of Wireless network
	Blink	Getting access to wireless network
LAN (Green)	On	System Failure
	On	Normal Operation
	Blink	IP Setting

2. Bottom's LED Specification



Figure 3-7. Bottom's LED

LED	Status	Description
RS232	On	Serial Port is setting as RS232 mode
RS422	On	Serial Port is setting as RS422 mode
RS485	On	Serial Port is setting as RS485 mode

3.4 Reset Button



Figure 3-8. Reset Button

LED	Description
Push shortly (within 5 seconds)	Restart the WiComm-1
Press for a long time and release. (Over 5 seconds)	Initialize the WiComm-1 as factory default. Then system automatically is restart

3.5 Wireless antenna

Both sides can be equipped with antennas. In default, 2dB high response wireless antenna is provided but another antenna can be used depending on operation environment.

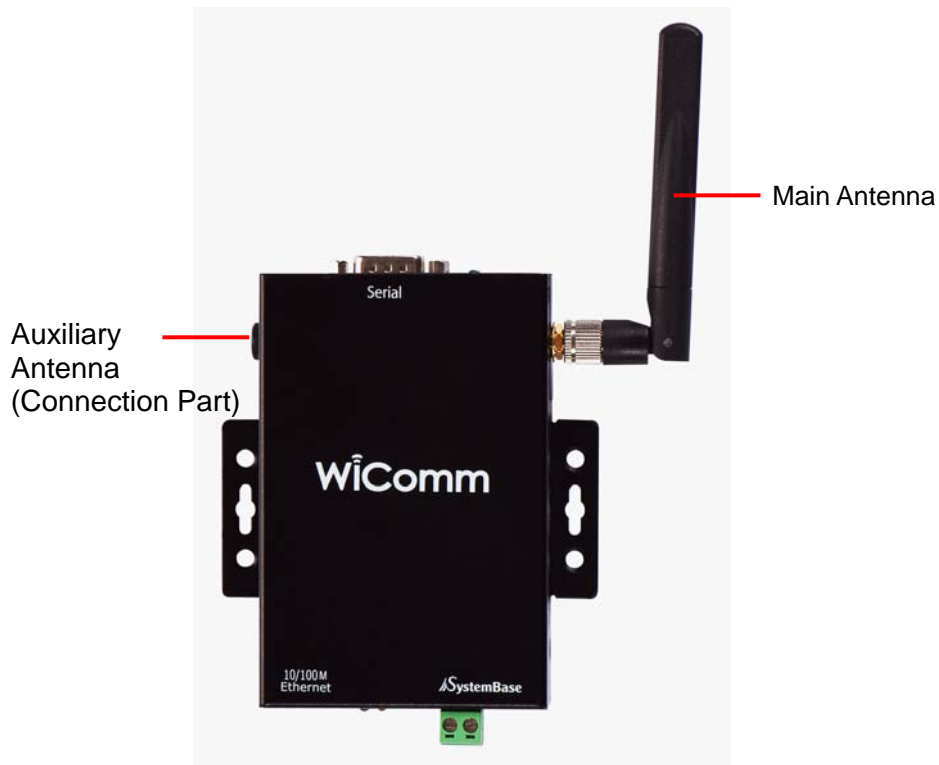


Figure 3-9. Wireless antenna

Chapter 4. Installation

This chapter provides the information required for the connection of WiComm-1 to a desired serial device, such as WiComm-1's Wi-Fi, LAN and serial connection.

The way to connect WiComm-1 to devices and network is described below.

4.1 Connecting the PC

4.1.1 Connecting the LAN Cable

LAN cable is used only when WiComm-1 is connected to network through a cable connection.

Connect an end of a LAN cable to the LAN port of WiComm-1 and the other end to a hub, a switch or different network equipment that is accessible to a network.

WiComm-1 supports 10 Mbps or 100 Mbps Ethernet connection (Automatic detection).

Note

Since WiComm-1 automatically detects Crossover cable or Direct cable regardless of its type, a user may connect any type of cable.

4.1.2 Connecting the Serial Cable

With a DB9 serial cable, connect an external serial device or PC's serial port to the serial port of WiComm-1.

Refer to '[Chapter3, Hardware Description](#)' for cable specification or detailed information.

4.1.3 Connecting the power adapter

1. Connect the power adapter of WiComm-1 to an AC outlet. WiComm-1 performs various tests automatically and it may take several seconds for normal operation.
2. Verify that the WiComm-1 is normally operated. If the WiComm-1 is operated normally, the PWR LED turns on and the RDY LED blinks slowly. After a wireless is enabled, the Wi-Fi LED turns on. No blink of the RDY LED indicates a failure in the equipment. In such case, turn off the power of the equipment and turn on the power again. If the problem continues, refer to '[8.2 Troubleshooting](#)' of this document.

4.2 WiComm-1 Access and Environment Setting

After connecting the WiComm-1 to a PC, let's access the WiComm-1.

- To access the WiComm-1, the IP address of the WiComm-1 is required. However, in most cases, a DHCP server does not assign the same IP whenever the power is turned on, so it is recommended to use a fixed IP address.
- In default, a fixed cable IP address (10.10.1.1) is assigned in the WiComm-1.

4.2.1 Network Setting for a PC

1. To access the WiComm-1, network setting for a PC should be changed to enable the PC to access 10.10.1.1.
Perform the network setting by referring to the figure below:

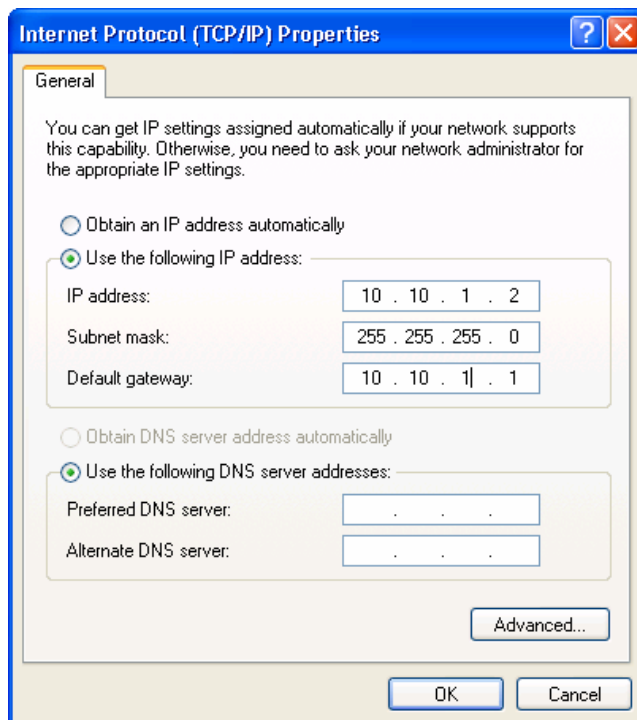


Figure 4-1. PC Network Setting Window

4.2.2 Environment Setting

After connecting a power cable to a power adapter or a terminal block, the WiComm-1 is booted when the power of WiComm-1 is turned on. Since, however, wireless network setting is not provided in the initial factory setting, the environment setting for the LAN port of the WiComm-1.

For the environment setting, a user should be aware of followings:

- The IP address of the WiComm-1 should be set before connected to a network.
- The default value for the network of the equipment is Static. If the network supports Dynamic Host Configuration Protocol (DHCP), the WiComm-1 searches a DHCP server automatically to assign an IP address just after the WiComm-1 is turned on.
- If the network does not support DHCP, a fixed IP address should be set up.
- In most cases, since DHCP servers do not assign the same addresses whenever the WiComm-1 is turned on, it is recommended to use a fixed IP address. (Contact a user system administrator for technical support).

1) Setting via Web

A user can easily carry out the environment setting for the WiComm-1 via the Web and can access the Web by using any Web browser. For detailed information, refer to [‘Chapter 5. Setting via Web’](#).

2) Setting by Telnet

A user can carry out the environment setting for the WiComm-1 by Telnet. For detailed information, refer to [‘Chapter 6. Setting by Telnet’](#).

3) Setting via Portview

The WiComm-1 can be monitored via Port view, which is a windows-based utility developed by SystemBase Co., Ltd. For detailed information, refer to Portview User’s Manual.

4.3 Checking the Operation

4.3.1 Checking Serial Port Operation

1. After installing SystemBase COM Port Redirector by referring to COM Port Redirector manual, assign **10.10.1.1** and Port**4001** to COM Port. (The following figure is an example for the allocation of COM3.
2. Connect the serial port of the WiComm-1 to a serial port (COM1) of a PC.
3. Open COM1 and COM3 by using the TestMP2 program. Set the serial port to **9600bps / N-8-1**.

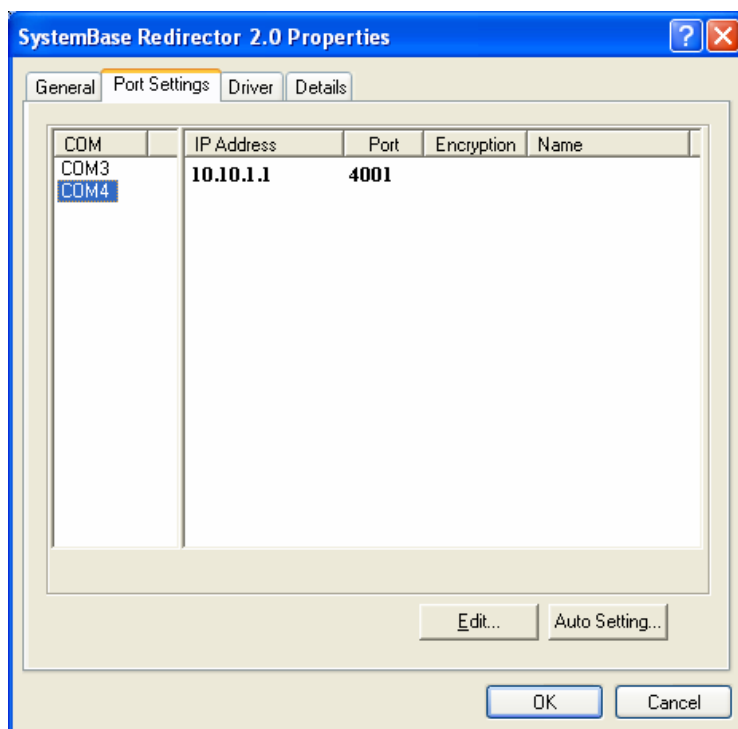


Figure 4-2. Serial Setting Window

4. Run 'Send Test Data' in the Port menu of the TestMP2 program. Normally, the following data should be displayed.

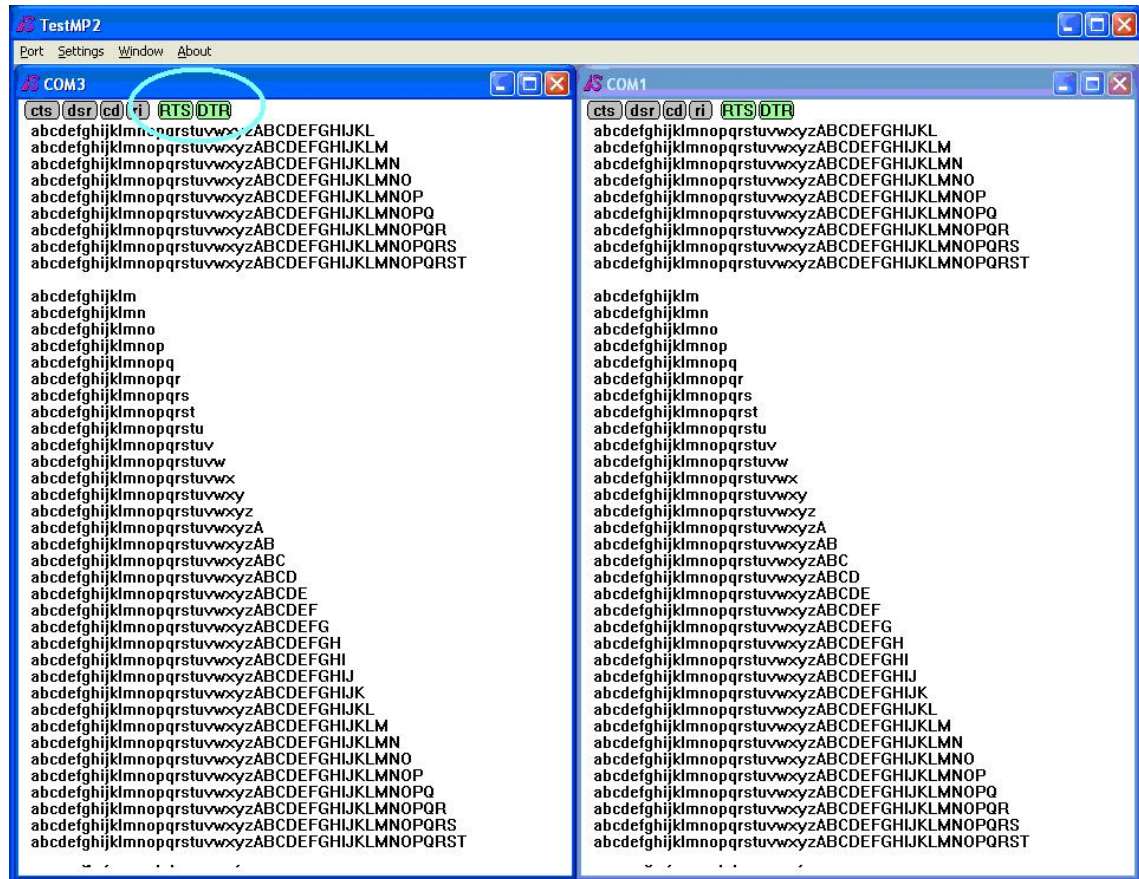


Figure 4-3. Test Data Display Window

4.3.2 Checking Wireless LAN Operation

For wireless communication using the WiComm-1, 802.11b/g wireless network should satisfy the followings:

- A PC or equipment equipped with 802.11b/g wireless function to connect the WiComm-1 directly (in Ad-Hoc mode)
- Wireless Access Point (AP) supporting 802.11b/g to connect the WiComm-1 to a wireless network (in Infrastructure mode)

For wireless network setting, a user should know various data concerned with wireless network.

- Wireless mode to be used (Infrastructure or Ad-hoc)
- SSID of wireless network to be used (service set identifier)
- Frequency channel
- Wireless security setting value (WEP)

If a user enters the wireless network setting by referring to wireless LAN settings in '[Chapter 5. Setting via Web](#)', the MAC address of the connected Access Point in the Access Point column on the initial Web Access window is appeared and the signal strength is displayed in Link Quality.

Wireless Status	
Wireless Mode	Infrastructure
Access Point	00:14:BF:98:8E:CD
Channel	06 (Frequency: 2.437GHz)
Rate	54Mb/s
Link Quality	68/100
Signal Level	-66 dBm
Noise Level	-95 dBm

Figure 4-4. Wireless Status Window

Note

If a user uses a TCP/IP network but a dynamic IP address is not assigned through a Dynamic Host Configuration Protocol (DHCP), the user should assign a fixed IP address to the WiComm-1 directly. If the user assigned a subnet address different from that of the PC to be connected to the WiComm-1, the user should set the subnet mask and default gateway addresses.

Chapter 5. Setting via Web

5.1 Accessing the Web

If a user opens a web browser and enters the IP address of the WiComm-1, a page to set the web is appeared. In the initial access window, enter a user name and a password and press the Login name. The same user name and the same password for the web connection are used for Telnet. If the user name or the password is changed in either Web or Telnet, the changed value is, also, applied to the other.

- Default user name: WiComm-1
- Default password : 99999999

The image shows a web browser window titled 'Welcome to Web Manager'. At the top is the 'WiComm' logo. Below the logo, the text 'Welcome to Web Manager' is displayed. Underneath, there is a table showing 'Device Name' as 'WICOMM-1' and 'Firmware Version' as '1.0a'. Below the table, there are two input fields: 'Username' and 'Password'. At the bottom of the form, there are two buttons: 'Login' and 'Cancel'.

Figure 5-1. Initial Window for WiComm-1 Connection

5.2 Setup Menu

The Setup menu can configure a desired function after selecting a desired menu.

WiComm		[Summary]	Device Name: WICOMM-1 Logged in as wicomm Logout
Setup Menu			
Summary			
Network Settings			
Serial Settings			
Wireless Settings			
Admin Settings			
Change Password			
Update Firmware			
Factory Default			
Save & Reboot			
Copyright 2007 SystemBase Co., Ltd. All rights reserved.			
Overview			
Device Name	WICOMM-1		
Firmware Version	1.0c		
Wireless Network Configuration			
Connection Mode	Static IP		
MAC Address	00:0E:2E:D5:5C:B6		
IP Address	192.168.1.71		
Subnet Mask	255.255.255.0		
Gateway	192.168.1.1		
Wireless Status			
Wireless Mode	Auto		
Access Point	No connection		
Channel	01 (Frequency: 2.412GHz)		
Rate	54Mb/s		
Link Quality	0/100		
Signal Level	-121 dBm		
Noise Level	-111 dBm		
Ethernet Configuration			
MAC Address	00:05:F4:09:08:07		
IP Address	10.10.1.1		
Subnet Mask	255.255.255.0		
Support Information			
Website	http://www.sysbas.com		
Contact	tech@sysbas.com		

Figure 5-2. Initial Login Window

The key functions of the Setup menu are as follows:

Table 5-1. Key Functions of the Setup Menu

Menu	Description
Summary	View a summary of WiComm-1.
Network Settings	Configure network connection settings.
Serial Settings	Configure detailed operation environment for serial communication.
Wireless Settings	Configure wireless network parameters.
Admin Settings	View and change device information and support information.
Change Password	Change ID and password for both Web and Telnet interface.
Update Firmware	Update WiComm-1's firmware.
Factory Default	Restore all the factory default settings.
Save & Reboot	Save the current configurations and then reboot WiComm-1.

5.3 Network Settings

Network Settings can configure the general network environment and network management. After changing values, a user need to click **[Submit]** button. To reflect the changed values to the system, save the current settings in the **[Save & Reboot]** menu and then restart the system. Changes will be discarded, if a user do not save current settings.

Figure 5-3. Network Setting Window

The key functions of the Device Type menu are as follows:

Table 5-2. Key Functions of Portview Configuration

Menu	Default	Description
Device Type	Device Server	Selects operation type of the system.(Option: Device Server) •Device Server: Connect a serial device to a wireless network.

The key functions of Wireless Network Configuration are as follows:

Table 5-3. Key Functions of Wireless Network Configuration

Menu	Default	Description
Line Type	Static IP	Sets an IP address type in a wireless network. (Option: Static IP, DHCP) •Static IP : Specify an IP address manually. •DHCP : Assign a dynamic IP address through a DHCP server
IP Address	192.168.1.71	Sets an IP address of a wireless network. If the line Type is Static IP, a user can enter an IP address directly. If line type is DHCP, the current IP address is displayed. In DHCP type, the address cannot be changed.
Subnet Mask	255.255.255.0	Sets an IP address of a wireless network. If the line Type is Static IP, a user can enter a subnet mask address directly. If line type is DHCP, the current subnet mask address is displayed. In DHCP type, the address cannot be changed.
Gateway	192.168.1.1	Sets a gateway address of a wireless network. If the line Type is Static IP, a user can enter a gateway address directly. If line type is DHCP, the current gateway address is displayed. In DHCP type, the address cannot be changed.
DNS	None	Sets a DNS server address of a wireless network. If the line Type is Static IP, a user can enter a DNS server address directly. If line type is DHCP, the current DNS server address is displayed. In DHCP type, the address cannot be changed.

The key functions of Ethernet Configuration are as follows:

Table 5-4. Key Functions of Ethernet Configuration

Menu	Default	Description
IP Address	10.10.1.1	Sets the IP address of the LAN port of the WiComm-1.
Subnet Mask	255.255.255.0	Sets the subnet mask address of the LAN port of the WiComm-1.

The installation and the operation of lots of equipment are installed and operated are required integrated management. In addition, a failure in the equipment requires a lot of time for the problem analysis. To lower this efficiency and provide better solution, the WiComm-1 provides Portview, which is the network administration system software. In addition, the WiComm-1 supports SNMP, which is the worldwide standard protocol for network management.

The key functions of Management Configuration are as follows:

Table 5-5. Key Functions of Management Configuration

Menu	Default	Description
SNMP	Disable	Enables or disables the Simple Network Management Protocol (SNMP) function. (Option: Disable, Enable) •MIB-II (RFC 1213): System, Interface, IP, ICMP, TCP, UDP •MIB-I (RFC 1317): Serial Interface
Portview	Disable	Enables or disables the Portview function. (Option: Disable, Enable) If this function is enabled, the following setting is available.

Management Configuration	
SNMP	<div>Disable Help</div>
PortView	<div>Enable Help</div>
Portview Server IP / Port	<div>0.0.0.0 / 4000 Help</div>

Figure 5-4. Management Setting Window

The key functions of Portview Configuration are as follows:

Table 5-6. Key Functions of Portview Configuration

Menu	Default	Description
Portview Server IP / Port	0.0.0.0 / 4000	Sets the IP address and the socket number of a PC where the Portview is installed. If the IP is set to 0.0.0.0, the Portview is not used. (For detailed information, refer to Portview User's Manual.)

5.4 Serial Settings

Serial Setting can configure the communication and operation environment of the serial port. After changing the settings, press the [Submit] button. To reflect the changed values to the actual system, save the current settings in the [Save & Reboot] menu and then restart the system. Changes will be discarded, if a user does not save current settings.

The figure below shows the WiComm-1's serial setting window is displayed in

The screenshot shows the 'Serial Port 1' configuration window in the WiComm-1 Web Manager. The window is titled 'Serial Port 1' and contains the following settings:

Setting	Value	Help
Status	Enabled	Help
Interface	RS232	Help
Operation Mode	COM Port(Win200x/P)	Help
Local Socket Port	4001	Help
Port Alias	Port 1	Help
Baud Rate	9600 bps	Help
Data Bits	8 bits	Help
Stop Bits	1 bit	Help
Parity	None	Help
Flow Control	None	Help
Device Type	Data Only	Help
Remote IP Address / Port	0.0.0.0 / 4000	Help
Keepalive Time	0 sec(s)	Help
MTU	1 byte(s)	Help
Port Login	Disable	Help

Below the settings table, there is a checkbox for 'Reset Port' and two buttons: 'Submit' and 'Cancel'.

Figure 5-5. Serial Setting Window

Table 5-7. Key Functions of Serial Settings

Menu	Default	Description
Status	Enabled	Displays whether to use a serial port.
Interface	RS232	Specifies a serial interface of WiComm-1 in view of software. The current interface is displayed by using the LED by the side of the serial port. (Option: RS232, RS422 Point To Point, RS422 Multi Drop, RS485 Non-Echo, RS485 Echo)
Operation Mode	COM (Win200x/XP)	<p>Selects the operation protocol used in a serial port. (Option: COM(Win200x/XP), COM(Win98/ME), TCP Server, TCP Client, TCP Multi-Server, UDP Server, UDP Client)</p> <p>•COM(Win200x/XP) : Use WiComm-1's serial port as a virtual COM port under the Windows 2000/XP/2003 based environment. (Up to the information on data and signal line of the serial port can be controlled.)</p> <p>•COM(Win98/ME) : Use WiComm-1's serial port as a virtual COM port under the Windows 98/ME based environment. (Up to the information on data and signal line of the serial port can be controlled.)</p> <p>•TCP Server : WiComm-1 acts as a socket server and waits the access from a client on the network. The waiting socket number is specified in [Local Socket Port]. If the socket connection is completed, the data generated between the socket and the serial port is transmitted as it as.</p> <p>•TCP Client : When a specific server waits the connection from the network, WiComm-1 acts as a client of the socket and attempts to access by using the specified IP address and socket number of the server. When the socket connection is completed, the data generated between the socket and the serial port is transmitted as it as. The server IP address and port number to request the access is specified in the [Remote IP/Port] menu.</p> <p>•TCP Multi-Server : WiComm-1 acts as a server and allows the maximum five socket clients to access simultaneously, so the WiComm-1 broadcasts the same data for each socket.</p> <p>•UDP Server : WiComm-1 acts as an UDP server and waits the UDP access from a client on the network. The waiting socket number is specified in [Local Socket Port]. If UDP packets are received as a socket number waiting the access, the WiComm-1 transmits data through the serial port and creates an UDP packet with the data from the serial port to transmit a client.</p> <p>•UDP Client : If data is entered from the serial port, the WiComm-1 transmits UDP packets to the specified server's IP address and socket number. The server IP address and port number to request the access is specified in the [Remote IP/Port] menu.</p>
Local Socket Port	4001	Specifies a socket number assigned in the port. This port is used to wait network socket connection in TCP server and UDP server modes.
Port Alias	Port1	Specifies a name that can be identified in the port (Up to 16 bytes).
Baud Rate	9600 bps	Sets communication speed. (Option: 150, 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200, 230400, 460800 and 921600 bps)
Data Bits	8	Sets the number of bits composing a byte. (Option: 5, 6, 7, 8)
Stop Bits	1	Sets the number of stop bits. (Option: 1, 2)

Menu	Default	Description
Parity	None	Sets the parity check. (Option: None, Odd, Even)
Flow Control	None	Sets the flow control. (Option: None, Xon/Xoff, RTS/CTS)
Device Type	DataOnly	<p>Sets whether to perform the signal line test for the equipment to be connected to the serial port.</p> <p>The setting as Modem supports all modem signal lines (excluding RI) and tests the status of the signal line for communication.</p> <p>The setting as DataOnly only communicates by Txd, Rxd, Gnd connections in the connection between devices.</p> <p>(Option: Data Only, Modem Signals)</p>
Remote IP Address / Port	0.0.0.0 / 4000	Specifies the IP address and the port of the target to be connected in TCP Client or UDP Client mode.
Keepalive Time	0 sec	<p>Disconnects the socket connection automatically when the specified time is passed without any communication from the other party after the socket access is connected.</p> <p>(Range: 0 ~ 32767)</p> <p>The setting of '0' disables this function.</p> <p>For example, let's suppose Operation Mode is a TCP server and Alive Check Time is set to 10. The TCP server waits the access from a network and then is connected if the access from a client is detected. After that, if no packet is received from the connected client for 10 seconds after the recent packet was received, the server disconnects the connection and returns to the standby mode.</p> <p>This setting is required because if abnormal termination (rebooting, short of LAN cable, etc.) occurs in one of the WiComm-1 and the client connected via a network, it can result in the communication failure.</p> <p>(Since a device cannot check the status of the status of the other device, it considers that the connection is alive.)</p> <p>The default setting as '0' does not perform this function and continuously maintains the socket access connected.</p> <p>This function is only applied when the operation mode is TCP Client, TCP Server, TCP Multi-Server.</p>

Menu	Default	Description
MTU	1 byte	<p>MTU stands for Maximum Transmission Unit and is set to transmit data continuously generated in the corresponding serial port to a socket at a time. (Range: 1 ~ 1100)</p> <p>Let's suppose a serial device continuously transmits a string in length of 100 bytes. If this values is set to 100, the WiComm-1 waits until all of 100 bytes are received and then transmits the data as a packet to a server through a socket. If 200-byte string is transmitted, the WiComm-1 divides the string into two packets in unit of 100-byte.</p> <p>If a data with less than 100 byte is received, the WiComm-1 transmits the data as a packet to a server when no data is received for about 20 ms after receiving the last data.</p> <p>In the setting of '1', the WiComm-1 transmits the received data in unit of byte to a server. Therefore, several packets are transmitted to the server. The setting range is between 1 byte and 1100 bytes.</p>
Port Login	Disable	<p>In TCP server mode, the checking of the user name and the password when a client is connected is set up. mode operation, When this function is active, user name and password can be specified. (Option: Enable, Disable)</p>
Passive Username	conuser	In TCP server mode, a user name to be connected as a client is specified. (Up to 32 bytes)
Passive Password	99999999	In TCP server mode, a password to be connected is specified. (Up to 32 bytes)
Reset Port	Disable	To initialize the corresponding port, click the [Submit] button after checking the check box.

5.5 Wireless Settings

Wireless Settings can configure the access information to use a wireless network. After changing the settings, press the [Submit] button. To reflect the changed values to the actual system, save the current settings in the [Save & Reboot] menu and then restart the system. Changes will be discarded, if a user does not save current settings.

The screenshot shows the WiComm-1 Web Manager interface in Microsoft Internet Explorer. The browser address bar shows the URL `http://192.168.0.241/cgi-bin/getagent.cgi?type=4`. The page title is "WiComm-1 Web Manager". The left sidebar contains a "Setup Menu" with the following items: Summary, Network Settings, Serial Settings, Wireless Settings (highlighted), Admin Settings, Change Password, Update Firmware, Factory Default, and Save & Reboot. The main content area is titled "[Wireless Settings]" and includes the following sections:

- Wireless Network Configuration**
 - Wireless Mode: Infrastructure (dropdown menu) [Help]
 - Wireless Network Mode: 802.11b/g Mixed (dropdown menu) [Help]
 - Wireless Network Name(SSID): [text input field] [Help]
 - Channel: Auto (dropdown menu) [Help]
 - Bitrate: Auto (dropdown menu) [Help]
 - RTS Threshold: 0 [text input field] byte(s) [Help]
 - Fragment Threshold: 0 [text input field] byte(s) [Help]
 - 802.11h: Disable (dropdown menu) [Help]
- Wireless Roaming**
 - Wireless Roaming enable: Disable (dropdown menu) [Help]
- Wireless Security**
 - Security Mode: Not Use (dropdown menu) [Help]

At the bottom of the main content area, there are two buttons: "Submit" and "Cancel".

Figure 5-6. Wireless LAN Setting Window

Table 5-8. Key Functions of Wireless Settings

Menu	Default	Description
Wireless Mode	Infrastructure	Sets the operation mode of a wireless LAN. (Option: Ad-Hoc, Infrastructure) • Ad-Hoc : Use the WiComm-1 in Ad-Hoc mode. The Ad-Hoc mode allows 1:1 communication with a client in another Ad-Hoc mode. • Infrastructure : Use the WiComm-1 in Infrastructure mode. The Infrastructure mode is the mode that the WiComm-1 accesses to a wireless AP as a client and then accesses to another network through the AP.
Wireless Network Mode	802.11b/g Mixed	Sets the operation protocol of a wireless network. (Option: 802.11b/g Mixed, 802.11b only, 802.11g only) 802.11b/g Mixed: Use 802.11b and 802.11g together. • 802.11b only : Use only 802.11b. • 802.11g only : Use only 802.11g.
Wireless Network Name (SSID)	None	Sets the identification (SSID) of a wireless network to be connected. (Up to 32 bytes)
Channel	Auto	Selects a frequency channel for wireless connection. (Option: Auto, 1 ~ 13) • Auto : Connect a channel specified in AP automatically. In most cases, this setting is used. • Value Specification : Specify a channel to be connected manually.
Bitrate	Auto	Sets the speed for wireless connection. (Option: Auto, 1, 2, 5.5, 6, 9, 11, 12, 18, 24, 36, 48, 54Mbps) The setting as Auto adjusts the speed depending on signal sensitivity and noise. In most cases, this setting is used. If Wireless Network mode is set to 802.11b/g Mixed, all options can be selected. The setting as 802.11b only allows setting as 1, 2, 5.5 and 11Mbps. The setting as 802.11g only allows setting as 6, 9, 12, 18, 24, 36, 48 and 54Mbps.
RTS Threshold	0	Sets the minimum packet size to send RTS in a communication node. (Range: 1 ~ 2347 bytes) This setting adds the RTS/CTS handshake procedure to verify that the transmission channel is empty before transmitting a packet. In most cases, this setting is not used. The setting as '0' or '2347' disables this function.
Fragment Threshold	0	Sets the maximum packet size to send a packet after dividing into small pieces. (Range: 256 ~ 2346 bytes) This setting transmits a packet after dividing into small pieces. Communication overhead is increased but communication error can be reduced in serious interference or noise environment. In most cases, this setting is not used. The setting as '0' or '2346' disables this function.
802.11h	Disable	Sets whether to use of the 802.11h spectrum management function. (Option: Disable, Enable) The 802.11h function is the system management standard to minimize the influence of the interference in wireless communication. If this setting is enabled, the WiComm-1 automatically adjusts the communication channel and the transmission strength to minimize the interference.

Table 5-9. Key Functions of Wireless Roaming

Menu	Default	Description
Wireless Roaming enable	disable	Set whether to use of the Roaming functions <ul style="list-style-type: none"> • Enable : Use Roaming function. • Disable : Do not use Roaming function.
Roaming Threshold	-75 (dbm)	If you have different Access Points and have enabled roaming, you should also set carefully the roaming threshold , which is the point (in signal strength) at which WiComm-1 search for a new Access Point. If you set it too low, WiComm-1 will spend to much time with a non optimal AP (getting a poorer throughput), and if you set it too high the card will waste time searching for a new AP too often. Max -50 dbm ~ Min -90 dbm
Roaming Scanning Period	60 (second)	If receive signal level is lower than Roaming Threshold, WiComm-1 scans the all AP(Access Point) every Roaming Scanning Period, Max 200 ~ Min 50 second

If the Wireless Roaming is set to enable, the following windows appears.

Wireless Roaming	
Wireless Roaming enable	Enable Help
Roaming Threshold	-75 dbm Help
Roaming Scanning Period	60 second Help

그림 5-7. Wireless Roaming Setting Windows

Table 5-10. Key Functions of Wireless Security

Menu	Default	Description
Security Mode	None	Sets the security authentication mode of a wireless network. <ul style="list-style-type: none"> • NONE : No use of the security authentication • WEP 64bit Encryption : Use 24-bit WEP key. • WEP 128bit Encryption : Use 12-8bit WEP key.

If the Security mode is set to WEP 64-bit or WEP 128-bit, the following window appears:

Wireless Security	
Security Mode	WEP 64bit Encryption Help
Passphrase	<input type="text"/> Generate Help
Default Key	1 Help
Key 1	<input type="text"/>
Key 2	<input type="text"/>
Key 3	<input type="text"/>
Key 4	<input type="text"/>

Figure 5-8. WEP Setting Window

Table 5-11. Key Functions of WEP Authentication

Menu	Default	Description
Passphrase	None	Creates 64-bit/128-bit Hex Key value with the string entered here. To enter a key value directly, enter the key value in the key1/key2/key3/key4 field..
Default Key	1	Selects the index of the key to be used from the created keys. (Option: 1, 2, 3 and 4)
Key 1 ~ 4	None	Selects WEP 64-bit (Enter ASCII 5 letters or a Hex Key value directly). •Input of ASCII 5-letter KEY1 : ABCDE •Input of a Hex Key value KEY1 : 0x3132333435 Selects WEP 128-bit (Enter ASCII 13-letter or a Hex Key value directly) •Input of ASCII 13-letter KEY1 : ABCDEFGHIJKLM • Input of a Hex Key value KEY1 : 0x31323334353637383940414243

5.6 Admin Settings

Admin Settings can configure the information on the equipment and support. After changing the settings, press the [Submit] button. To reflect the changed values to the actual system, save the current settings in the **[Save & Reboot]** menu and then restart the system. Changes will be discarded, if a user does not save current settings.

The screenshot shows the WiComm-1 Web Manager interface in Microsoft Internet Explorer. The browser's address bar displays `http://192.168.0.243/cgi-bin/getagent.cgi?type=5`. The page has a dark red header with the WiComm logo on the left, the title "[Admin Settings]" in the center, and user information on the right: "Device Name: WICOMM-1", "Logged in as wicomm", and a "Logout" link. A left sidebar contains a "Setup Menu" with links to Summary, Network Settings, Serial Settings, Wireless Settings, Admin Settings (highlighted), Change Password, Update Firmware, Factory Default, and Save & Reboot. The main content area is divided into two sections: "Device Information" and "Support Information".

Device Information	
Device Name	<input type="text" value="WICOMM-1"/> Help
Firmware Version	1.0a Help
Hardware Version	1.0 Help
Kernel Version	1.06 Help

Support Information	
Website	<input type="text" value="http://www.sysbas.com"/> Help
Contact	<input type="text" value="tech@sysbas.com"/> Help

At the bottom of the form are two buttons: "Submit" and "Cancel". The footer of the page, located in the left sidebar, reads: "Copyright 2007 SystemBase Co., Ltd. All rights reserved."

Figure 5-9. Admin Settings Setting Window

The key functions of the Setup menu are as follows:

Table 5-12. Key Functions of Admin Settings

Menu	Default	Description
Device Name	WiComm-1	Displays the device name.
Firmware Version	-	Displays the current version of the device firmware.
Hardware Version	-	Displays the current version of the device hardware.
Kernel Version	-	Displays the current version of the device kernel.
Website	-	Displays a Website address for customer support.
Contact	-	Displays a contact address for technical support.

5.7 Change Password

Change Password enables to change the user name and the password for Web and Telnet connection.

After changing the settings, press the [Submit] button. To reflect the changed values to the actual system, save the current settings in the **[Save & Reboot]** menu and then restart the system. Changes will be discarded, if a user does not save current settings.

- Default Username: WiComm-1
- Default password: 99999999

The screenshot displays the 'WiComm-1 Web Manager' interface in a Microsoft Internet Explorer browser window. The address bar shows the URL `http://192.168.0.243/cgi-bin/getagent.cgi?type=7`. The page has a dark red header with the 'WiComm' logo on the left, the title '[Change Password]' in the center, and user information on the right: 'Device Name: WICOMM-1', 'Logged in as wicomm', and a 'Logout' link. A left sidebar contains a 'Setup Menu' with the following items: Summary, Network Settings, Serial Settings, Wireless Settings, Admin Settings, Change Password (highlighted), Update Firmware, Factory Default, and Save & Reboot. The main content area is titled 'Change Password' and contains three input fields: 'Enter Current Password', 'Enter New Password', and 'Retype New Password'. Below these fields are 'Submit' and 'Cancel' buttons. At the bottom left of the sidebar, there is copyright information: 'Copyright 2007 SystemBase Co., Ltd. All rights reserved.'

Figure 5-10. Change Password Setting Window

5.8 Update Firmware

Firmware is an embedded application operating in the flash memory of the WiComm-1.

To transmit the firmware selected, specify the location of the firmware file after pressing the [Browse...] button and then press the [Start Update] button. If the firmware is transmitted, the WiComm-1 is automatically rebooted by using new firmware.

The figure below shows the firmware update window:

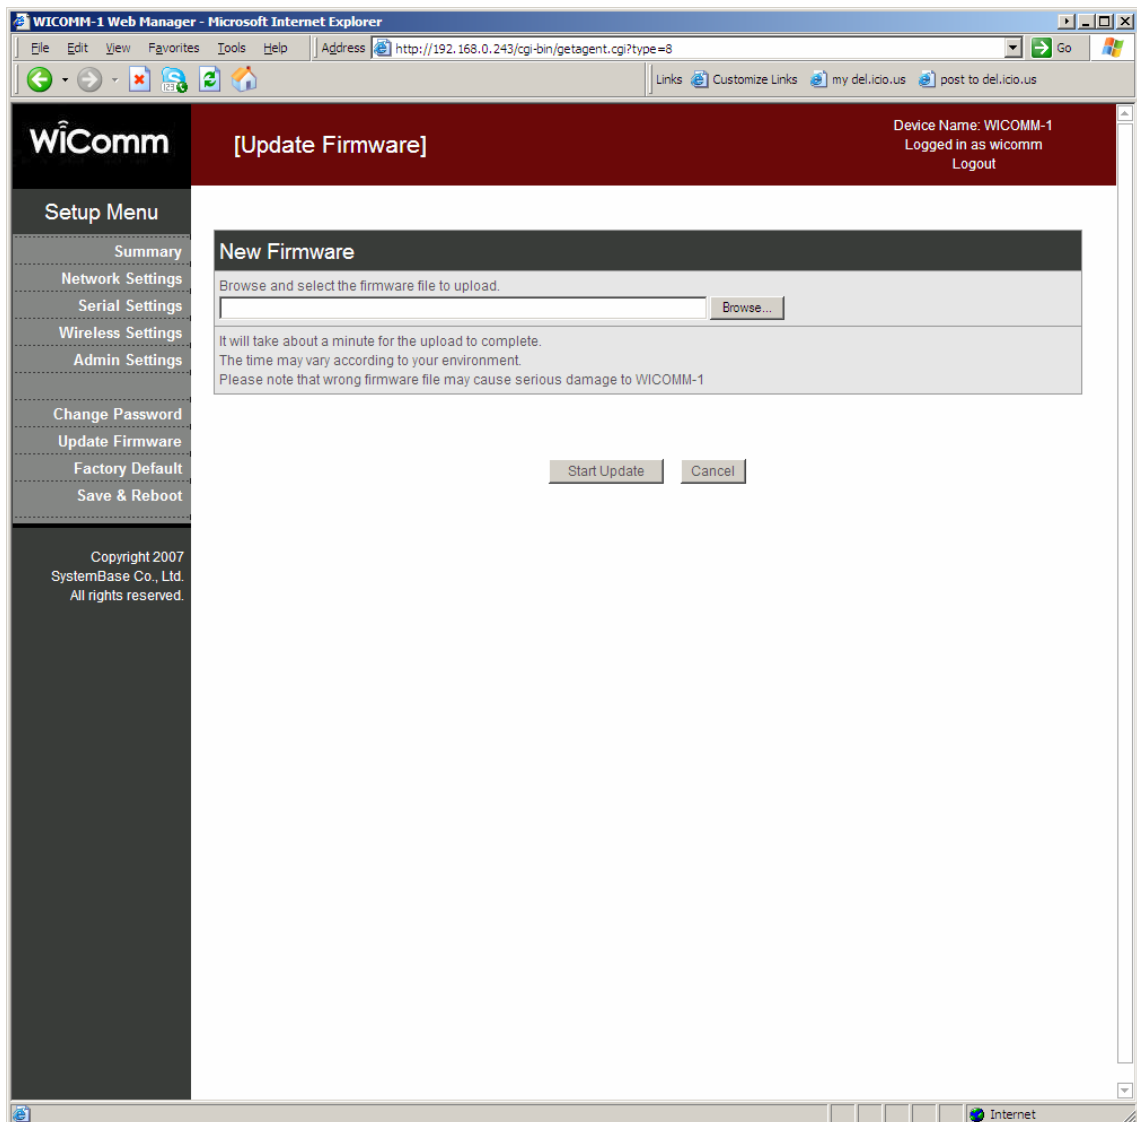


Figure 5-11. Update Firmware Setting Window

5.9 Factory Default

Factory Default can configure all setting values of the WiComm-1 into the default values.

Press the [Restore Factory Defaults] button to delete all setting values stored in the WiComm-1 and restart the WiComm-1 as the factory default values.

Caution

Once a user selects the [Restore Factory Defaults] button, the setting values are not resumed.

- Default IP for Factory default : 192.168.1.71

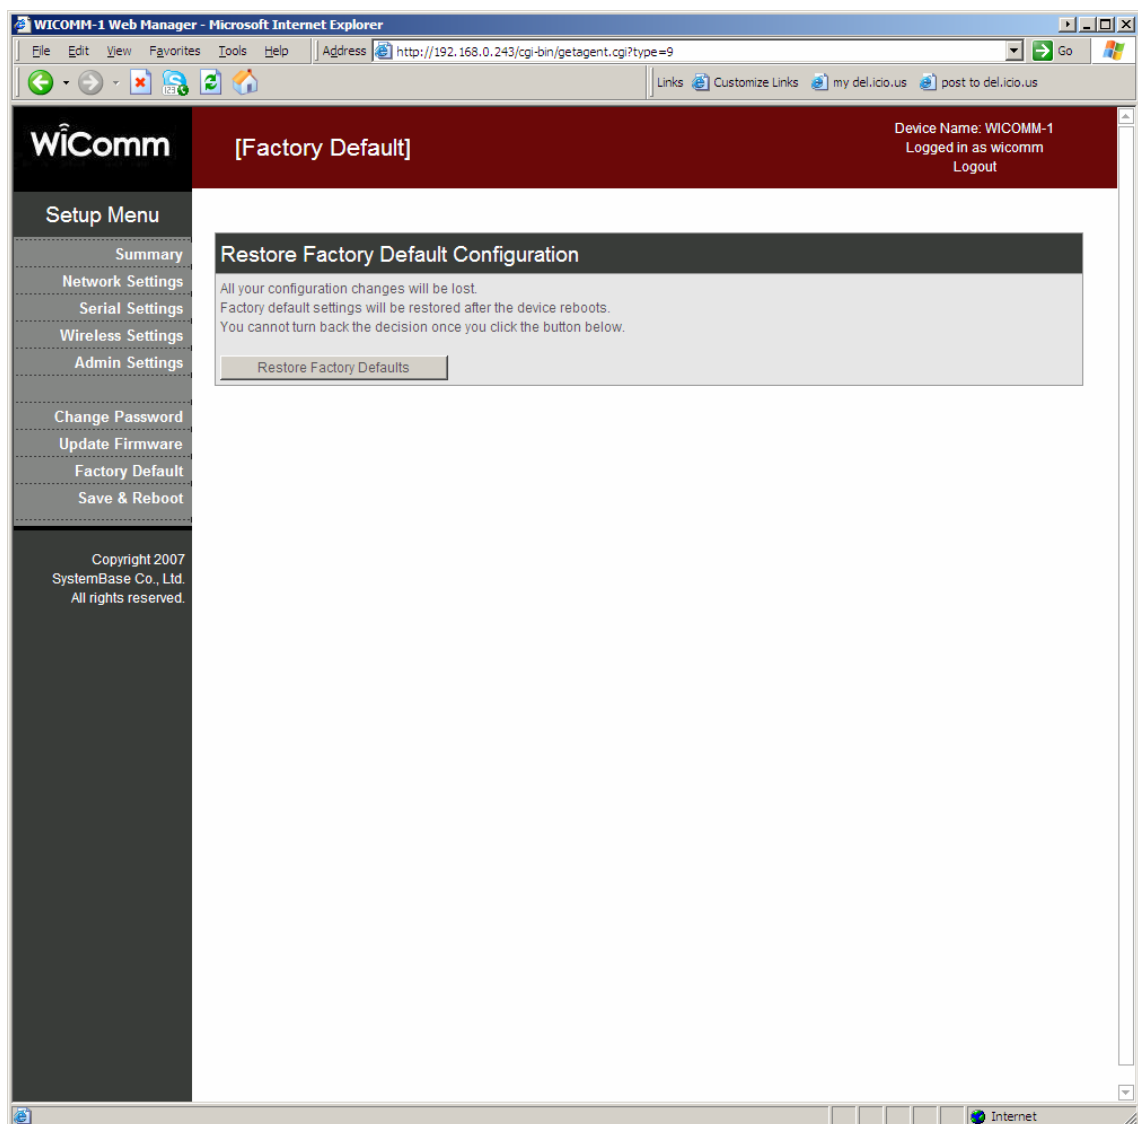


Figure 5-12. Factory Default Setting Window

5.10 Save & Reboot

Save & Reboot enables to save the changed settings to the flash memory and restarts the system to reflect the changes.

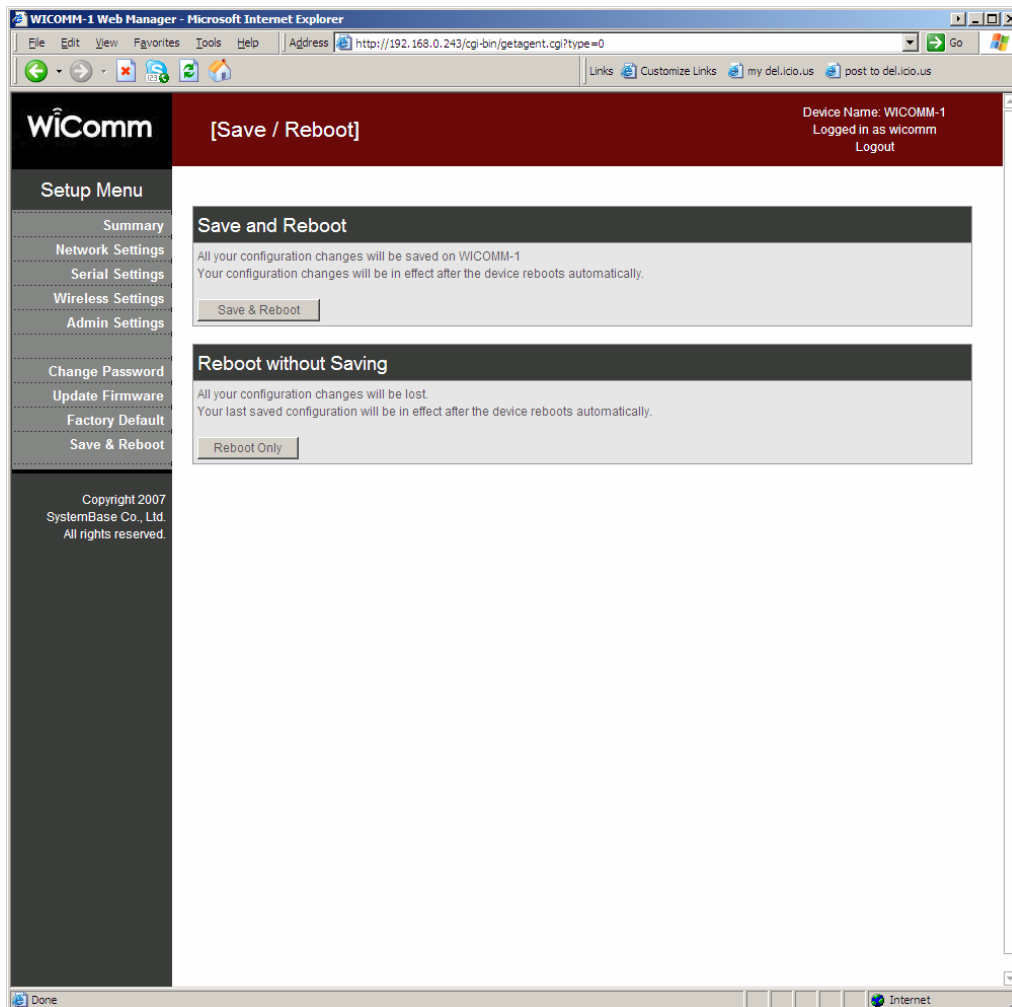


Figure 5-13. Save & Reboot Setting Window

The key functions of the Save & Reboot menu are as follows:

Table 5-13. Key Functions of Save & Reboot

Menu	Description
Save and Reboot	Save the settings to the flash memory and restart the WiComm-1.
Reboot without Saving	Restart the WiComm-1 without saving the settings. This option is used to return to the old setting when a user changes a setting by accident.

Chapter 6. Setting via Telnet

6.1 Telnet Connection

If a user executes a telnet client program and enters the IP address of the WiComm-1, the login message to enter a user name and a password appears. To log in, enter the correct ID and password. The same user name and the same password for the web connection are used for Telnet.

If the user name or the password for the Web (or Telnet) is changed, the user should access Telnet (or Web) with the changed value.

- Default user name: WiComm-1
- Default password : 99999999

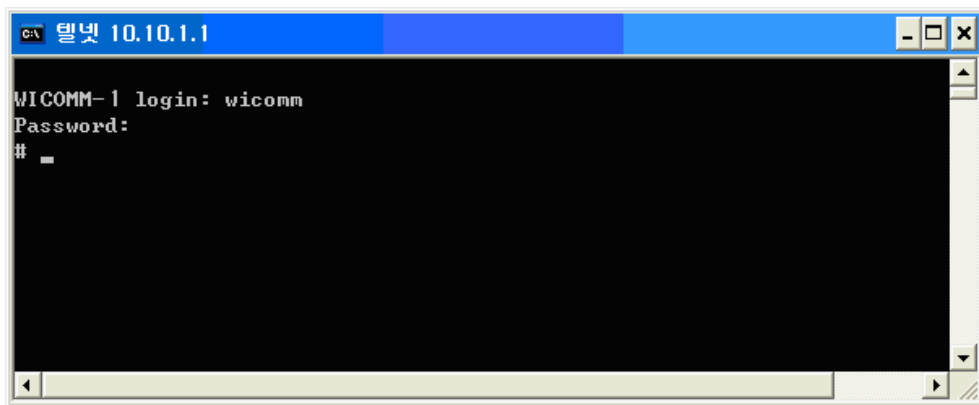


Figure 6-1. Telnet Access

- **[setup]** Command: Change the WiComm-1 setting
- **[view]** Command: Check the current setting of the WiComm-1

After changing the setting, the changed value can be checked by using the [View] command.

Note that this value is not saved until this value is saved by using the [Setup Save] command.

The changes not saved will be discarded.

Command Usage:

setup line [ip / dhcp]: setup line ip or setup line dhcp command is available

setup ip <IP address>: Enter an actual value like setup ip 192.168.0.223.

6.2 Setup Commands

The basic Setup commands and functions are listed in the table below:

Table 6-1. Basic Setup Commands

Command	Description
setup view	Check WiComm-1 summary.
setup nw	Check network settings and system information.
setup serial	Check the serial port information.
setup wlan	Check the wireless network settings.
setup admin	Set the system name and the support information.
setup passwd	Change the password.
setup update	Update the firmware.
setup factory	Initialize into the factory setting.
setup save	Save the changed settings.
setup reboot	Restart the system.
setup mac	Enter the MAC address of the system.

6.3 View Commands

The View commands and functions are listed in the table below:

Table 6-2. View Commands

Command	Description
setup view all	Display all setting values.
setup view setup view nw	Display the current network setting.
setup view serial	Display the current serial port setting.
setup view wlan	Display the current setting concerned with wireless network.
setup view admin	Display the current administration information.
setup view passwd	Display the current password.

6.4 Network Command

```
setup nw [ mode / ip / subnet / gateway / dns / ethernet / manage ] <var ... >
```

6.4.1 Setting Wireless Network

setup nw mode [static / dhcp] (Default: static)

- Set the way to acquire the IP address required for the wireless network connection of the WiComm-1

setup nw ip <IP Address> (Default: 192.168.1.71)

- Set WiComm-1's wireless IP address.
- Enter an IP address directly in Static mode.
- The IP address cannot be change in DHCP mode.

setup nw subnet <Subnet mask> (Default: 255.255.255.0)

- Set WiComm-1's subnet mask.
- Enter a subnet mask directly in Static mode.
- The IP address cannot be change in DHCP mode.

setup nw gateway <Gateway address> (Default: 192.168.1.1)

- Set WiComm-1's gateway.
- Enter a gateway address directly in Static mode.
- The IP address cannot be change in DHCP mode.

setup nw dns<DNS address>

- Set WiComm-1's DNS server address.
- Enter a gateway address directly in Static mode.
- The IP address cannot be change in DHCP mode.

6.4.2 Setting Ethernet

setup nw ethernet ip <IP Address> (Default: 10.10.1.1)

- Set WiComm-1's wired LAN port address.

setup nw ethernet subnet <Subnet mask> (Default: 255.0.0.0)

- Set the subnet mask for WiComm-1's wired LAN port.

6.4.3 Setting Management

To install or administrate lots of devices, the integration of the administration is required. In addition, a failure in the equipment requires a lot of time for the problem analysis. To lower this efficiency and provide better solution, the WiComm-1 provides Portview, which is the network management system software.

setup nw manage snmp [enable / disable] (Default: disable)

- Enable/disable the Simple Network Management Protocol (SNMP) function.
- MIB-II (RFC 1213): System, Interface, IP, ICMP, TCP, UDP
- MIB-I (RFC 1317): Serial Interface

setup nw manage portview ip <IP Address> (Default: 0.0.0.0)

- Set the IP address of the PC where the Portview is installed. If the IP address is 0.0.0.0, the NMS function is disabled. For detailed information, refer to Portview User's Manual.

setup nw manage portview port <Socket Number> (Default: 4000)

- Set the number of the socket port of the PC where the Portview is installed.

6.5 Serial Commands

Serial commands are used for the setting of serial port communication and operating environment. For the detailed information on each option, refer to ‘[Chapter 5. Setting via Web.](#)’

```
setup serial [ interface / mode / port / name / speed / data / stop / parity /
flow / signal / rip / rport / alive / ㅁㅅ / login / username / password / reset ]
<var ... >
```

Table 6-3. Serial Commands

Command	Default	Description
setup serial 1 interface [rs232 / rs422ptp / rs422md / rs485ne / rs485e]	RS232	Set the serial interface of the WiComm-1 in terms of software. The status of the current interface can be checked via the LED beside the serial port.
setup serial 1 mode [com2kxp / com98 / t cp_server / tcp_clie nt / tcp_mserver / udp _server / udp_client]	com2kxp	Select the operating protocol to be used in the serial port.
setup serial 1 port <port number>	4001	Specify the number of the socket assigned in the port. This port is used to wait the network socket connection in TCP server and UDP server mode.
setup serial 1 name <name>	Port 1	Specify a name that can be identified in the port (up to 16 bytes).
setup serial 1 speed [150 / 300 / 600 / 120 0 / 2400 / 4800 / 960 0 / 19200 / 38400 / 5 7600 / 115200 / 2304 00 / 460800 / 92160 0]	9600bps	Sets communication speed.
setup serial 1 data [5 / 6 / 7 / 8]	8	Set the number of the bits to establish a byte.
setup serial 1 stop [1 / 2]	1	Set the number of stop bits.
setup serial 1 parity [none / odd / even]	none	Set the way to check the parity bit.
setup serial 1 flow [none / xon / rts]	none	Set the way of flow control.
setup serial 1 signal [data / modem]	data	Set whether to test the signal line for a device connected to the serial port.
setup serial 1 rip <IP address>	0.0.0.0	Specify the IP address of the target to be connected in TCP Client mode.

Command	Default	Description
setup serial 1 rport <socket number>	4000	Specify the number of the target port to be connected in TCP Client mode.
setup serial 1 alive <0 ~ 32767>	0	Disconnect the socket connection if the specified time is passed without any communication after the sock is connected to a server.
setup serial 1 mtu <1 ~ 1100>	1	MTU is the abbreviation of Maximum Transmission Unit and is set to transmit continuous data from the corresponding port at a time.
setup serial 1 login [enable / disable]	Disable	In TCP Server mode, check the user name and the password when a client attempts to connect.
setup serial 1 username <username>	conuser	In TCP Server mode, set the user name to request for a clients' connection (up to 32 bytes). This command is only applied to the use of the port login function.
setup serial 1 password <password>	99999999	In TCP Server mode, set the password to request for a client's connection (up to 32 bytes). This command is only applied to the use of the port login function.

6.6 Wireless Network Commands

6.6.1 Command List

Wireless Network commands are used for the setup concerned with wireless network supporting 802.11 b/g

```
setup wlan [ mode / nwmode / ssid / channel / bitrate / sensthr / rtsthr / fragthr
/ ieee80211h / secmode / wep] <var ... >
```

setup wlan mode [infrastructure / ad-hoc] (Default: infrastructure)

- Set the mode of a wireless network.

setup wlan nwmode [mixed / b_only / g_only] (Default: infrastructure)

- Set the operation mode of a wireless network.
- mixed is the mode that automatically detects 802.11b and 802.11g.
- b_only is only used for 802.11b network.
- g_only is only used for 802.11g network.

setup wlan ssid < SSID > (Default: NULL)

- Set the name (SSID) of a wireless network.

setup wlan channel < channel number > (Default: 0)

- Select the frequency channel for wireless communication.
- 0: Auto

setup wlan bitrate< auto / 1 / 2 / 5.5 / 6 / 9 / 11 / 12 / 18 / 24 / 36 / 48 / 54 > (Default: auto)

- Set the speed of wireless communication.

setup wlan rtsthr< 0 ~ 2347 > (Default: 0)

- Set the minimum packet size to send RTS in a communication node.

setup wlan fragthr< 256 ~ 2346 > (Default: 0)

- Set the maximum packet size to send a packet after dividing into several pieces.

setup wlan ieee80211h< disable / enable > (Default: disable)

- Set whether to use of 802.11h spectrum management function.

setup wlan secmode [node / wep64 / wep128] (Default: none)

- Set the security authentication mode of a wireless network.

setup wlan roam < disable / enable > (Default: disable)

- Set whether to use of the Roaming functions

setup wlan scan <60, 50 ~ 200 >**(Default: 60)**

- If you have different Access Points and have enabled roaming, you should also set carefully the **roaming threshold**, which is the point (in signal strength) at which WiComm-1 search for a new Access Point. If you set it too low, WiComm-1 will spend too much time with a non optimal AP (getting a poorer throughput), and if you set it too high the card will waste time searching for a new AP too often.

setup wlan roamts <-75, -90 ~ -50 >**(Default: -75)**

- If receive signal level is lower than Roaming Threshold, WiComm-1 scans the all AP(Access Point) every Roaming Scanning Period,

6.6.2 Setting WEP

setup wlan wep defkey<passphrase> (Default: 1)

- Set the key index to be used among four 64-bit/128-bit Hex keys.

setup wlan wep passphrase <passphrase> (Default: NULL)

- Set the passphrase value to be converted into a 64-bit/128-bit Hex key value. However, the Telnet mode does not support of the dynamic creation of WEP keys. The dynamic creation is available through Web setup interface.

setup wlan wep [key1 / key2 / key3 / key4] <key> (Default: NULL)

- Set the key value for WEP 64-/128-bit authentication.

6.7 Management Setting

The command enables to change the default information of the WiComm-1.

```
setup admin [ name / website / contact ] <var ... >
```

setup admin name < device name > (Default: WiComm-1)

- Change the name of the WiComm-1 system. The changed name can be checked when the user attempts the access to the Web or Telnet access.

setup admin website <website address> (Default: <http://www.sysbas.com>)

- Among the support information displayed in Web access, change the website address.

setup admin contact <contact> (Default: tech@sysbas.com)

- Among the support information displayed in Web access, change the contact address.

6.8 System Commands

setup passwd

- Change the user name and the password required for Web access or Telnet access.

setup factory

- Delete all settings and return to the factory settings. To save the setting, the system should be rebooted.

setup save

- Save the current settings. To save the setting, the system should be rebooted.

exit

- Exit Telnet.

setup reboot

- Restart the WiComm-1.

setup update < firmware name >

- Update the WiComm-1 firmware. At this time, the absolute path should be entered for the path of the firmware. (Example: /var/home/firmware.img (O) firmware.img (X))

Note

To update the firmware by Telnet, the firmware should be uploaded to the WiComm-1 by FTP.

Chapter 7. Setting Guide for each Configuration

This chapter provides the settings for each configuration, giving representative examples to use WiComm-1.

1. Connecting to Access Point (Infrastructure Mode)
2. Connecting in Serial to Serial by Using Two WiComm-1 systems (AD-HOC Mode)
3. Connecting to Wireless PC LAN (AD-HOC Mode)

7.1 Preparation for the Environment Setting

1. Connect the WiComm-1 to a PC with a LAN cable (Cross Cable).
2. The user should know the communication method of the serial device in advance (RS-232/422/485).
3. If setting to Infrastructure mode, the user should know the SSID of the wireless AP in advance.

7.1.1 PC Network Setting

To access the WiComm-1, IP address, subnet mask, default gateway of the PC should be modified as follows: To display Internet Protocol (TCP/IP) Registration Information window, move to “**Desktop > My Network Environment > Local Area Connection > Property > Internet Protocol (TCP/IP).**”

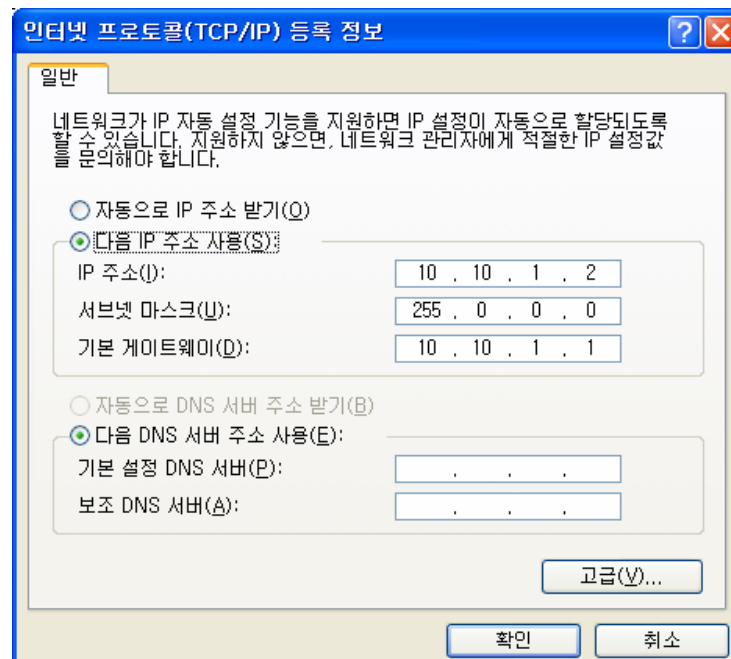


Figure 7-1. Internet Protocol (TCP/IP) Registration Information

7.1.2 Ping Test

Perform the ping test to verify the WiComm-1 is normally connected to a network.

To open the following Command Prompt window, move to “**Start**” > **Run**, type **cmd** and press the OK button.

Enter the ping command on the command prompt as follows:

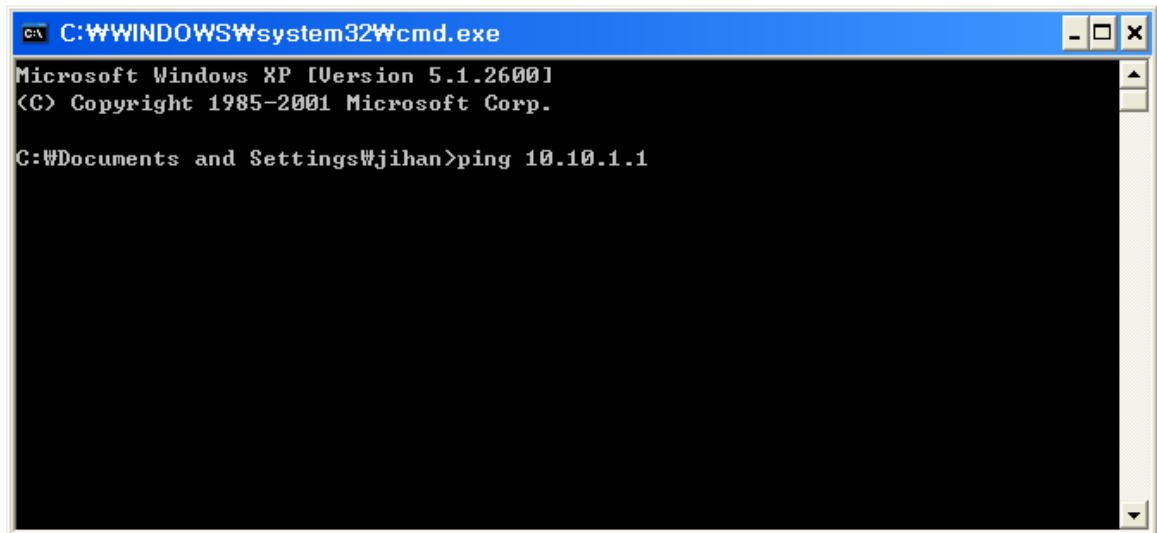


Figure 7-2. Ping Test

If the result of the ping test is the same as that of [Figure 7-3](#).

Ping Test Result Message, the WiComm-1 is normally connected to the PC.

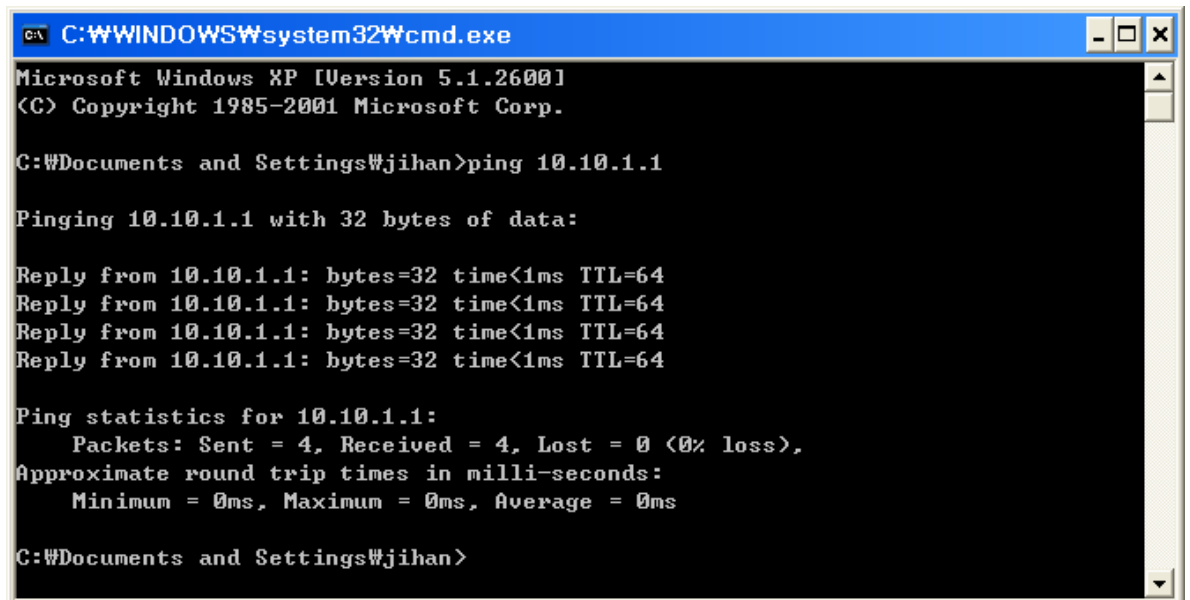


Figure 7-3. Ping Test Result Message

If the ping test result is **Request timed out**, it indicates the connection is not normally completed. In such case, check the followings:

1. Check if the LAN cable is correctly connected.
 2. Check if the settings of PC's IP address, subnet mask and default gateway were performed correctly.
 3. After press the Reset switch of the WiComm-1 for five seconds, perform the ping test again.
- ※If you press the Reset button for more than five seconds, the settings are initialized into the factory settings.

Note**Ping Test: Normal Access Message**

Reply from 10.10.1.1: bytes=32 time

Ping Test: Access Error Message

Request timed out.

7.1.3 Access to a Web Server

Access the web server built-in the WiComm-1 for the setting of the WiComm-1. Open a web browser of the PC and enter the default IP address, **10.10.1.1**, of the WiComm-1. If the connection between the WiComm-1 and the PC is normal as a result of the ping test, the Login window appears as shown in [Figure 7-4](#). *WiComm-1 Web Server Login Window.*

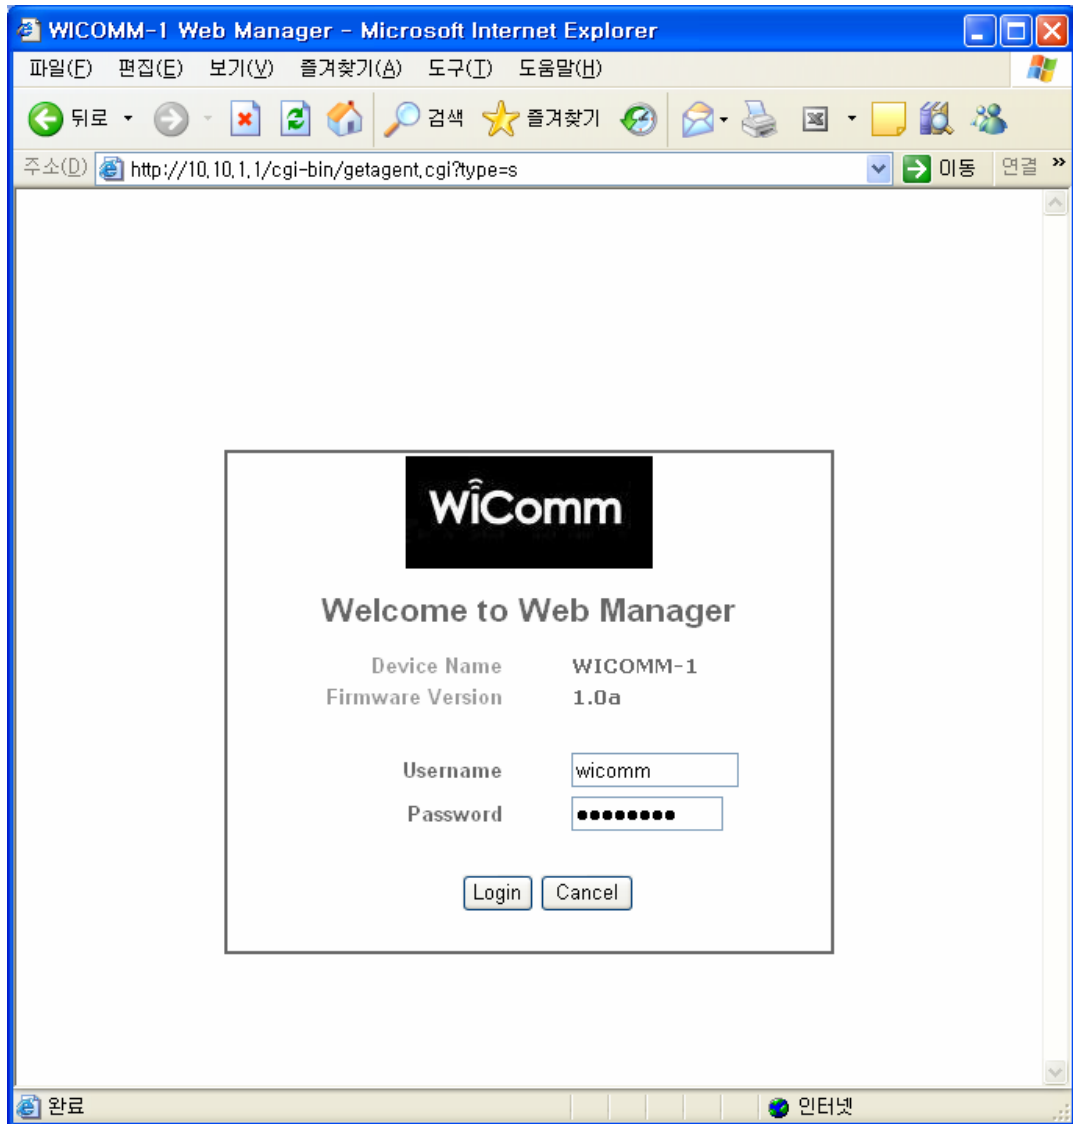


Figure 7-4. WiComm-1 Web Server Login Window

The user name is **WiComm-1** and the password is **99999999**. Since the above values are the factory defaults, a user should access the WiComm-1 initially.

Until now, the basic information for WiComm-1 setting is described.

7.2 Connecting to Access Point (Infrastructure Mode)

This connection is the way to use a serial device connected to the WiComm-1 like a COM port installed in a PC. By setting the wireless AP SSID information, Security authentication key value, IP information, wireless LAN mode (as Infrastructure) of the WiComm-1 via Web or Telnet, a user can construct a wireless network between the WiComm-1 and an AP as shown in *Figure 7-5. Connecting to an Access Point (Infrastructure Mode)*.

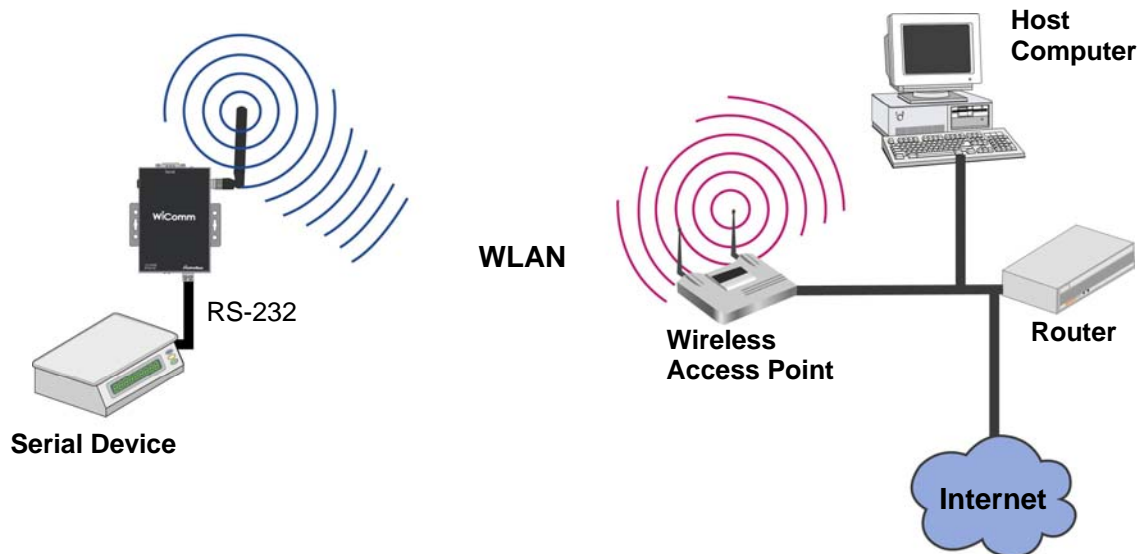


Figure 7-5. Connecting to an Access Point (Infrastructure Mode)

7.2.1 Logging on the WiComm-1

Open a web browser and enter 10.10.1.1 in the address bar to log in the WiComm-1. If the login is performed successfully, a window appears as shown in [Figure 7-6. WiComm-1 Summary](#). After clicking each menu on the left side of the window, a user can set the corresponding item.

WiComm		[Summary]	Device Name: WICOMM-1 Logged in as wicomm Logout
Setup Menu Summary Network Settings Serial Settings Wireless Settings Admin Settings Change Password Update Firmware Factory Default Save & Reboot Copyright 2006 SystemBase Co., Ltd. All rights reserved.	Overview		
	Device Name	WICOMM-1	
	Firmware Version	1.0a	
	Wireless Network Configuration		
	Connection Mode	Static IP	
	MAC Address	00:0E:2E:DC:10:74	
	IP Address	192.168.1.71	
	Subnet Mask	255.255.255.0	
	Gateway	192.168.1.1	
	Bridge	Disabled	
Wireless Status			
Wireless Mode	Auto		
Access Point	No connection		
Channel	06 (Frequency: 2.437GHz)		
Rate	1Mb/s		
Link Quality	59/100		
Signal Level	-76 dBm		

Figure 7-6. WiComm-1 Summary

7.2.2 Network Settings

After clicking Network Settings among the Set Menus, set values as shown in [Figure 7-7. Infrastructure Mode Network Settings](#) and then click the [Submit] button.

Device Type	
Device Type	Device Server Help

Wireless Network Configuration	
Connection Mode	Static IP Help
IP Address	192.168.1.71 Help
Subnet Mask	255.255.255.0 Help
Gateway	192.168.1.1 Help
DNS	168.126.63.1 Help

Ethernet Configuration	
IP Address	10.10.1.1 Help
Subnet Mask	255.0.0.0 Help

Management Configuration	
SNMP	Disable Help
PortView	Disable Help

Figure 7-7. Infrastructure Mode Network Settings

1. Set Device Type to **Device Server**.
2. Set Connection Mode to **Static IP**.
 - It is recommended to use Static IP, other than DHCP, in setting. Static IP is more convenient for the additional status inspection and the setting change.
3. Set IP Address, Subnet Mask, Gateway, and DNS as factory default values.
 - For the setting, the user should know the range of IP address assigned in advance.
4. The IP address and the Subnet Mask of Ethernet Configuration are used for the setting of the wired LAN of the WiComm-1.
 - These items are set only if required.

7.2.3 Serial Settings

After clicking Serial Settings among the Set Menus, set values as shown in *Figure 7-8. Infrastructure Mode Serial Settings* and then click the [Submit] button.

Serial Port 1	
Status	Enabled Help
Interface	RS232 Help
Operation Mode	COM Port(Win200xXP) Help
Local Socket Port	4001 Help
Port Alias	<input type="text"/> Help
Baud Rate	9600 bps Help
Data Bits	8 bits Help
Stop Bits	1 bit Help
Parity	None Help
Flow Control	None Help
Device Type	Data Only Help
Remote IP Address / Port	0.0.0.0 / 0 Help
Keepalive Time	0 sec(s) Help
MTU	1 byte(s) Help
Port Login	Disable Help

Figure 7-8. Infrastructure Mode Serial Settings

1. Set Interface to **RS232**.
- During the setting, set the serial interface of the device connected to the WiComm-1.
2. Set Operation Mode to **COM Port(Win200xXP)**.
- Select the corresponding OS in the setting.

7.2.4 Wireless Settings

After clicking Wireless Settings among the Set Menus, set values as shown in *Figure 7-9. Infrastructure Mode Wireless Settings* and then click the [Submit] button.

Wireless Network Configuration	
Wireless Mode	Infrastructure Help
Wireless Network Mode	802.11b/g Mixed Help
Wireless Network Name(SSID)	wicomm Help
Channel	Auto Help
Bitrate	Auto Mbps Help
RTS Threshold	0 byte(s) Help
Fragment Threshold	0 byte(s) Help
802.11h	Disable Help

Wireless Roaming	
Wireless Roaming enable	Disable Help

Wireless Security	
Security Mode	Not Use Help

Figure 7-9. Infrastructure Mode Wireless Settings

1. Set Wireless Mode to **Infrastructure** mode.
 2. Set Wireless Network Mode to **802.11b/g Mixed**.
- In the setting, set a mode supported by AP. If the mode is unknown, set as 802.11b/g Mixed.
3. Set Wireless Network Name(SSID) to **WiComm-1**, which is the SSID of the AP.
- In the setting, enter the SSID of the current AP. This document supposes WiComm-1 as the SSID of the AP
4. Set Channel to **Auto**.
- This value can be set at the disposal of a user.
5. Set Bitrate to **Auto**.
- This value can be set at the disposal of a user.

7.2.5 Save & Reboot

To reflect the setting to the WiComm-1, click the **[Save & Reboot]** on the Save & Reboot button on the Save & Reboot sub-menu.



Figure 7-10. Infrastructure Mode Save & Reboot

If the WiComm-1 is rebooted, the wireless LAN IP is changed into the IP set in Wireless Network Configuration on the Networks Settings submenu. To access the WiComm-1 with the specified wireless IP, perform the ping test by using a PC (with the IP assigned by the AP) within the AP area. If the ping test is normally performed, the wireless LAN of the WiComm-1 is normally working.

Now, the WiComm-1 setting for **Infrastructure Mode** is completed.

7.2.6 Serial Loopback Test

If the above setting is completed and the ping test is normally is performed, connect the serial port of the WiComm-1 to Loopback. (Connect receive/transmit pins. e.g., connect pin 3 to pin 5 for RS232 communication).

After that, install the Com Redirector program contained in the CD provided to use the serial port of the WiComm-1 like the serial port of a PC.

Connect the COM port registered as the serial port of the WiComm-1 by using the serial communication emulator program and perform the test.

Note

For the detailed installation method for the Com Redirector program, refer to the Com Redirector installation manual contained in the CD provided.

7.3 Connecting in Serial to Serial by Using Two WiComm-1 Systems (Ad-Hoc Mode)

The connection between WiComm-1 systems is the way to manage serial devices through the connection between WiComm-1 systems with no separate wireless AP. By Web or Telnet, a user can construct a wireless network between WiComm-1 systems by setting wireless LAN mode (as Ad-Hoc), SSID information and IP information of the WiComm-1.

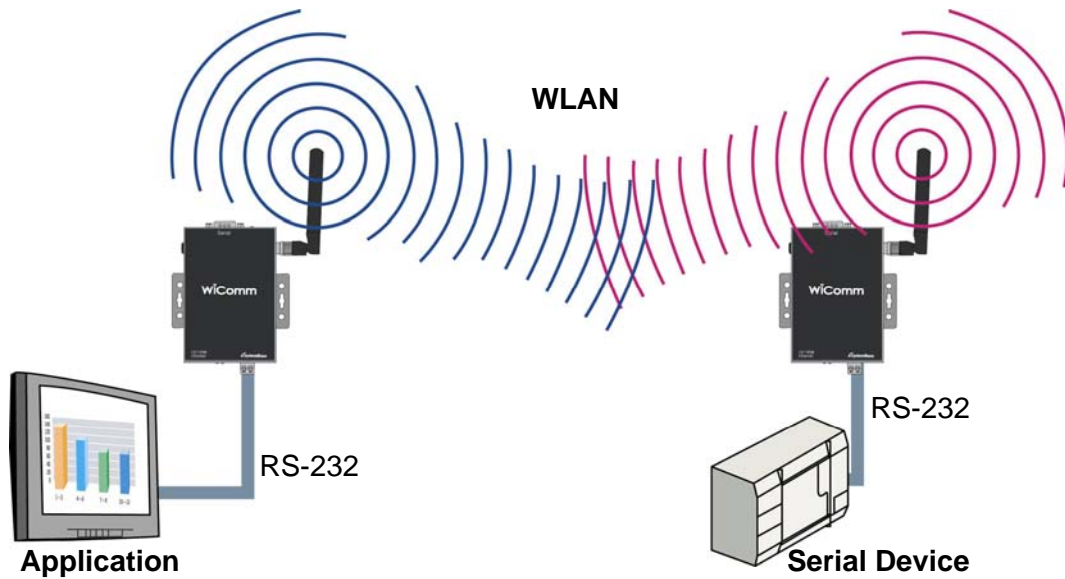


Figure 7-11. Connecting two WiComm-1 Systems (Ad-Hoc Mode)

7.3.1 Logging on to the WiComm-1

Open a web browser and enter 10.10.1.1 in the address bar to log in the WiComm-1. If the login is performed successfully, a window appears as shown in [Figure 7-12. WiComm-1 Summary](#).

WiComm

Setup Menu

Summary

Network Settings

Serial Settings

Wireless Settings

Admin Settings

Change Password

Update Firmware

Factory Default

Save & Reboot

Copyright 2006
SystemBase Co., Ltd.
All rights reserved.

[Summary]

Device Name: WICOMM-1
Logged in as wicomm
Logout

Overview

Device Name	WICOMM-1
Firmware Version	1.0a

Wireless Network Configuration

Connection Mode	Static IP
MAC Address	00:0E:2E:DC:10:74
IP Address	192.168.1.71
Subnet Mask	255.255.255.0
Gateway	192.168.1.1
Bridge	Disabled

Wireless Status

Wireless Mode	Auto
Access Point	No connection
Channel	06 (Frequency: 2.437GHz)
Rate	1Mb/s
Link Quality	59/100
Signal Level	-76 dBm

Figure 7-12. WiComm-1 Summary

A desired item can be set by using each submenu in the Setup Menu on the left side of the window.

7.3.2 Network Settings (Server)

After clicking Network Settings among the Set Menus, set values as shown in *Figure 7-13. Ad-Hoc Mode Network Settings (Server)* and then click the [Submit] button.

Device Type	
Device Type	Device Server Help

Wireless Network Configuration	
Connection Mode	Static IP Help
IP Address	192.168.1.71 Help
Subnet Mask	255.255.255.0 Help
Gateway	192.168.1.1 Help
DNS	168.126.63.1 Help

Ethernet Configuration	
IP Address	10.10.1.1 Help
Subnet Mask	255.0.0.0 Help

Management Configuration	
SNMP	Disable Help
PortView	Disable Help

Figure 7-13. Ad-Hoc Mode Network Settings (Server)

1. Set Device Type to **Device Server**.
2. Set Connection Mode to **Static IP**.
 - The mode is set to Static IP because a Client WiComm-1 should know the IP address of the Server WiComm-1 to use Ad-Hoc mode.
3. Set IP Address, Subnet Mask, Gateway, and DNS as factory default values.
 - For the setting, the user should know the range of IP address assigned in advance.
4. The IP address and the Subnet Mask of Ethernet Configuration are used for the setting of the wired LAN of the WiComm-1.
 - These items are set only if required.

7.3.3 Serial Settings (Server)

After clicking Serial Settings among the Set Menus, set values as shown in *Figure 7-14. Ad-Hoc Mode Serial Settings (Server)* and then click the [Submit] button.

Serial Port 1	
Status	Enabled Help
Interface	RS232 Help
Operation Mode	TCP Server Help
Local Socket Port	4001 Help
Port Alias	Port 1 Help
Baud Rate	9600 bps Help
Data Bits	8 bits Help
Stop Bits	1 bit Help
Parity	None Help
Flow Control	None Help
Device Type	Data Only Help
Remote IP Address / Port	0.0.0.0 / 4000 Help
Keepalive Time	0 sec(s) Help
MTU	1 byte(s) Help
Port Login	Disable Help

Figure 7-14. Ad-Hoc Mode Serial Settings (Server)

1. Set Interface to **RS232**.
- During the setting, set the serial interface of the device connected to the WiComm-1.
2. Set Operation Mode to **TCP Server**.
3. Set Local Socket Port to **4001**.
- This port is required for the access of the WiComm-1 set in Client mode.
4. Set Baud Rate to **9600bps**.
5. Set Data Bits to **8Bit**.
6. Set Stop Bits to **1Bit**.
7. Set Parity to **None**.
8. Set Flow Control to **None**.
9. Set Device Type to **Data Only**.
10. Set MTU to **'1'**.

7.3.4 Wireless Settings (Server)

After clicking Wireless Settings among the Set Menus, set values as shown in *Figure 7-15. Ad-Hoc Mode Wireless Settings (Server)* and then click the [Submit] button.

Wireless Network Configuration	
Wireless Mode	Ad-Hoc Help
Wireless Network Mode	802.11b/g Mixed Help
Wireless Network Name(SSID)	sysbas Help
Channel	4 Help
Bitrate	Auto Mbps Help
RTS Threshold	0 byte(s) Help
Fragment Threshold	0 byte(s) Help
802.11h	Disable Help

Wireless Roaming	
Wireless Roaming enable	Disable Help

Wireless Security	
Security Mode	Not Use Help

Figure 7-15. Ad-Hoc Mode Wireless Settings (Server)

1. Set Wireless Mode to **Ad-Hoc** mode.
 2. Set Wireless Network Mode to **802.11b/g Mixed**.
 3. Set Wireless Network Name (SSID) to **sysbas**.
 4. Set Channel to **'4'**.
- Any channel can be set. In this document, the channel is set to **'4'**.
5. Set Bitrate to **Auto**.

7.3.5 Save & Reboot (Server)

To reflect the setting to the WiComm-1, click the **[Save & Reboot]** on the Save & Reboot button on the Save & Reboot page.

The screenshot displays two distinct configuration panels. The top panel, titled 'Save and Reboot', contains a warning message: 'All your configuration changes will be saved on WICOMM-1. Your configuration changes will be in effect after the device reboots automatically.' Below this message is a button labeled 'Save & Reboot'. The bottom panel, titled 'Reboot without Saving', contains a warning message: 'All your configuration changes will be lost. Your last saved configuration will be in effect after the device reboots automatically.' Below this message is a button labeled 'Reboot Only'.

Figure 7-16. Ad-Hoc Mode Save & Reboot (Server)

If the WiComm-1 is rebooted, the setting values of the WiComm-1 are applied and the WiComm-1 operates as a server.

How to set Client WiComm-1 systems is will be described from the next section.

7.3.6 Network Settings (Client)

After clicking Network Settings among the Set Menus, set values as shown in *Figure 7-17. Ad-Hoc Mode Network Settings(Client)* and then click the [Submit] button.

Device Type	
Device Type	Device Server Help

Wireless Network Configuration	
Connection Mode	Static IP Help
IP Address	192.168.1.72 Help
Subnet Mask	255.255.255.0 Help
Gateway	192.168.1.1 Help
DNS	168.126.63.1 Help

Ethernet Configuration	
IP Address	10.10.1.1 Help
Subnet Mask	255.0.0.0 Help

Management Configuration	
SNMP	Disable Help
PortView	Disable Help

Figure 7-17. Ad-Hoc Mode Network Settings(Client)

1. Set Device Type to **Device Server**.
 2. Set Connection Mode to **Static IP**.
 3. Set IP Address to **192.168.1.72**.
- To prevent the IP address confliction, this IP address should use different IP address from the WiComm-1 set in Server mode.
4. Set IP Subnet Mask, Gateway, and DNS as factory default values.
 5. The IP address and the Subnet Mask of Ethernet Configuration are used for the setting of the wired LAN of the WiComm-1.
- These items are set only if required.

7.3.7 Serial Settings (Client)

After clicking Serial Settings among the Set Menus, set values as shown in *Figure 7-18. Ad-Hoc Mode Serial Settings(Client)* and then click the [Submit] button.

Serial Port 1	
Status	Enabled Help
Interface	RS232 Help
Operation Mode	TCP Client Help
Local Socket Port	4001 Help
Port Alias	Port 1 Help
Baud Rate	9600 bps Help
Data Bits	8 bits Help
Stop Bits	1 bit Help
Parity	None Help
Flow Control	None Help
Device Type	Data Only Help
Remote IP Address / Port	192.168.1.71 / 4001 Help
Keepalive Time	0 sec(s) Help
MTU	1 byte(s) Help
Port Login	Disable Help

Figure 7-18. Ad-Hoc Mode Serial Settings(Client)

1. Set Interface to **RS232**.
2. Set Operation Mode to **TCP Client**.
3. Set Local Socket Port to **4001**.
4. Set Baud Rate to **9600bps**.
5. Set Data Bits to **8-Bit**.
6. Set Stop Bits to **1Bit**.
7. Set Parity to **None**.
8. Set Flow Control to **None**.
9. Set Device Type to **Data Only**.
10. Set the remote IP address/port to **192.168.1.71**, which is the IP address of the Server WiComm-1 and set Port to 4001, which is the port number of the Server WiComm-1.
11. Set MTU to **'1'**.

7.3.8 Wireless Settings (Client)

After clicking Wireless Settings among the Set Menus, set values as shown in *Figure 7-19. Ad-Hoc Mode Wireless Settings (Client)* and then click the [Submit] button.

Wireless Network Configuration	
Wireless Mode	Ad-Hoc Help
Wireless Network Mode	802.11b/g Mixed Help
Wireless Network Name(SSID)	sysbas Help
Channel	4 Help
Bitrate	Auto Mbps Help
RTS Threshold	0 byte(s) Help
Fragment Threshold	0 byte(s) Help
802.11h	Disable Help

Wireless Roaming	
Wireless Roaming enable	Disable Help

Wireless Security	
Security Mode	Not Use Help

Figure 7-19. Ad-Hoc Mode Wireless Settings (Client)

1. Set Wireless Mode to **Ad-Hoc** mode.
 2. Set Wireless Network Mode to **802.11b/g Mixed**.
 3. Set Wireless Network Name (SSID) to **sysbas**.
- This SSID should be the same as that of the WiComm-1 set in Server mode.
4. Set Channel to **'4'**.
- This channel should be the same as that of the WiComm-1 set in Server mode.
5. Set Bitrate to **Auto**.

7.3.9 Save & Reboot (Client)

To reflect the setting to the WiComm-1, click the **[Save & Reboot]** on the Save & Reboot button on the Save & Reboot page.

The screenshot shows two distinct configuration options for the WiComm-1 device. The first option, titled 'Save and Reboot', is presented in a dark header box. Below the header, a light gray box contains the text: 'All your configuration changes will be saved on WICOMM-1' and 'Your configuration changes will be in effect after the device reboots automatically.' A button labeled 'Save & Reboot' is positioned at the bottom of this section. The second option, titled 'Reboot without Saving', also has a dark header box. Its light gray content box states: 'All your configuration changes will be lost' and 'Your last saved configuration will be in effect after the device reboots automatically.' A button labeled 'Reboot Only' is located at the bottom of this section.

Figure 7-20. Ad-Hoc Mode Save & Reboot(Client)

If the WiComm-1 is rebooted, the setting values of the WiComm-1 are applied and the WiComm-1 operates as a client.

After that, perform the test if the Client WiComm-1 is normally working.

7.3.10 Operation Test

If the settings of the Server WiComm-1 and the Client WiComm-1 are completed in the above sequence and are rebooted, access the Web server of the Server WiComm-1. (Execute a web browser on a PC and enter 10.10.1.1 in the address bar to log in to the web server.) If the web server is connected with a Client WiComm-1 through a wireless LAN, No Connection is displayed in the Access Point column on the Wireless Status box. The Link Quality value indicates the wireless sensitivity for the client. Check if the channel is the same as that of the Client WiComm-1.

If the above checkpoints are satisfied, the connection between the Server WiComm-1 and the Client WiComm-1 can be considered as 'normal',

Note

If the value of the Access Point is **No Connection**, it indicates the connection is failed.

Overview	
Device Name	WICOMM-1
Firmware Version	1.0a

Wireless Network Configuration	
Connection Mode	Static IP
MAC Address	00:0E:2E:DC:10:79
IP Address	192.168.1.71
Subnet Mask	255.255.255.0
Gateway	192.168.1.1
Bridge	Disabled

Wireless Status	
Wireless Mode	Ad-Hoc
Access Point	No connection
Channel	04 (Frequency: 2.427GHz)
Rate	11Mb/s
Link Quality	97/100
Signal Level	-18 dBm
Noise Level	-79 dBm

Figure 7-21. Checking the Access in Ad-Hoc Mode

If the connection was normally performed, test if data are exchanged normally after opening the serial ports of the server WiComm-1 and the Client WiComm-1 by using a HyperTerminal, which is a communication program.

In another way, open the COM port in the Server WiComm-1 and test the Loopback for the serial port of the Client WiComm-1. If the returned data as a result of the Loopback are displayed on the HyperTerminal window, the connection is normal.

7.4 Connecting the WiComm-1 to a Wireless PC LAN (Ad-Hoc Mode)

The connection between the WiComm-1 and a wireless PC LAN is a way to manage the WiComm-1 and serial devices connected to the WiComm-1 from a PC equipped with a wireless LAN card supporting 802.11b or 802.11g. By Web or Telnet, set the operation mode of the WiComm-1 to Ad-Hoc and set SSID information and IP information. A user can construct a wireless network between the WiComm-1 and a wireless LAN card by setting the same information as the SSID of the WiComm-1 in a PC or a device equipped with a wireless LAN card.

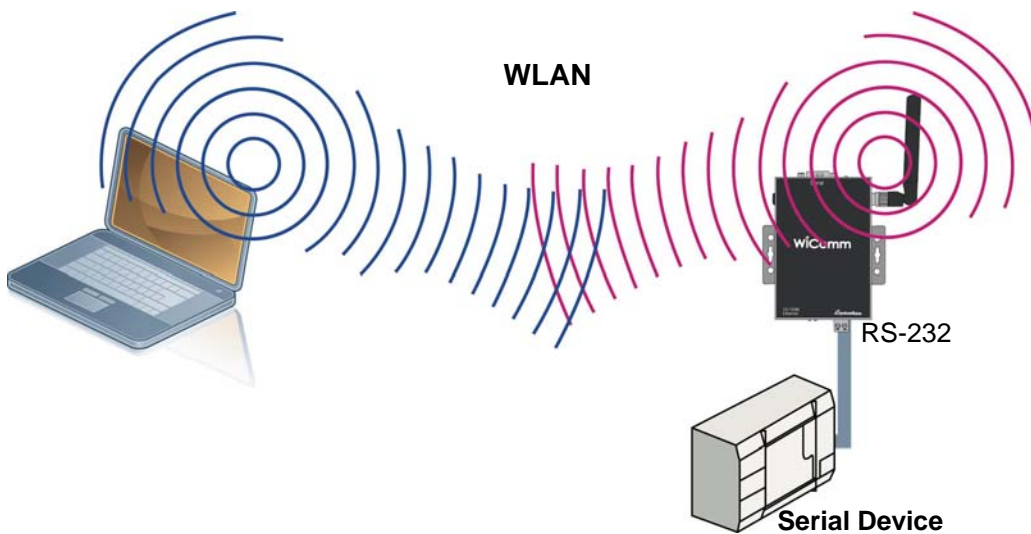


Figure 7-22. Connecting the WiComm-1 to Wireless PC LAN (Ad-Hoc Mode)

7.4.1 Logging on to the WiComm-1

Execute a web browser and enter 10.10.1.1 in the address bar to log in the WiComm-1. If the login is performed successfully, a window appears as shown in [Figure 7-23. WiComm-1 Summary](#).

WiComm

Setup Menu

Summary

Network Settings

Serial Settings

Wireless Settings

Admin Settings

Change Password

Update Firmware

Factory Default

Save & Reboot

Copyright 2006
SystemBase Co., Ltd.
All rights reserved.

[Summary]

Device Name: WICOMM-1
Logged in as wicomm
Logout

Overview

Device Name	WICOMM-1
Firmware Version	1.0a

Wireless Network Configuration

Connection Mode	Static IP
MAC Address	00:0E:2E:DC:10:74
IP Address	192.168.1.71
Subnet Mask	255.255.255.0
Gateway	192.168.1.1
Bridge	Disabled

Wireless Status

Wireless Mode	Auto
Access Point	No connection
Channel	06 (Frequency: 2.437GHz)
Rate	1Mb/s
Link Quality	59/100
Signal Level	-76 dBm

Figure 7-23. WiComm-1 Summary

7.4.2 Network Settings

After clicking Network Settings among the Set Menus, set values as shown in *Figure 7-24. Ad-Hoc Mode Network Settings* and then click the [Submit] button.

Device Type	
Device Type	Device Server Help

Wireless Network Configuration	
Connection Mode	Static IP Help
IP Address	192.168.1.71 Help
Subnet Mask	255.255.255.0 Help
Gateway	192.168.1.1 Help
DNS	168.126.63.1 Help

Ethernet Configuration	
IP Address	10.10.1.1 Help
Subnet Mask	255.0.0.0 Help

Management Configuration	
SNMP	Disable Help
PortView	Disable Help

Figure 7-24. Ad-Hoc Mode Network Settings

1. Set Device Type to **Device Server**.
 2. Set Connection Mode to **Static IP**.
- It is recommended to use Static IP, other than DHCP, in setting. Static IP is more convenient for the additional status inspection and the setting change.
3. Set IP Address, Subnet Mask, Gateway, and DNS as factory default values.
- For the setting, the user should know the range of IP address assigned in advance.
4. The IP address and the Subnet Mask of Ethernet Configuration are used for the setting of the wired LAN of the WiComm-1.
- This item is set only if required.

7.4.3 Serial Settings

After clicking Serial Settings among the Set Menus, set values as shown in *Figure 7-25. Ad-Hoc Mode Serial Settings* and then click the [Submit] button.

Serial Port 1	
Status	Enabled Help
Interface	RS232 Help
Operation Mode	COM Port(Win200x/XP) Help
Local Socket Port	4001 Help
Port Alias	<input type="text"/> Help
Baud Rate	9600 bps Help
Data Bits	8 bits Help
Stop Bits	1 bit Help
Parity	None Help
Flow Control	None Help
Device Type	Data Only Help
Remote IP Address / Port	0.0.0.0 / 0 Help
Keepalive Time	0 sec(s) Help
MTU	1 byte(s) Help
Port Login	Disable Help

Figure 7-25. Ad-Hoc Mode Serial Settings

1. Set Interface to **RS232**.
- Select a kind of the serial interface of the device to be connected to the WiComm-1.
2. Set Operation Mode to **COM Port(Win200x/XP)**.
- Select the corresponding OS in the setting.
3. Set Local Socket Port to **4001**.
4. Set Baud Rate to **9600bps**.
5. Set Data Bits to **8Bit**.
6. Set Stop Bits to **1Bit**.
7. Set Parity to **None**.
8. Set Flow Control to **None**.
9. Set Device Type to **Data Only**.
10. Set MTU to '1'.

7.4.4 Wireless Settings

After clicking Wireless Settings among the Set Menus, set values as shown in *Figure 7-26. Ad-Hoc Mode Wireless Settings* and then click the [Submit] button.

Wireless Network Configuration	
Wireless Mode	Ad-Hoc Help
Wireless Network Mode	802.11 b/g Mixed Help
Wireless Network Name(SSID)	sysbas Help
Channel	4 Help
Bitrate	Auto Mbps Help
RTS Threshold	0 byte(s) Help
Fragment Threshold	0 byte(s) Help
802.11h	Disable Help

Wireless Roaming	
Wireless Roaming enable	Disable Help

Wireless Security	
Security Mode	Not Use Help

Figure 7-26. Ad-Hoc Mode Wireless Settings

1. Set Wireless Mode to **Ad-Hoc** mode.
2. Set Wireless Network Mode to **802.11b/g Mixed**.
3. Set Wireless Network Name (SSID) to **sysbas**.
 - Any SSID can be set in the setting. In this document, the SSID is set to **sysbas**.
4. Set Channel to **'4'**.
 - Any channel can be set. In this document, the channel is set to **'4'**.
5. Set Bitrate to **Auto**.

7.4.5 Save & Reboot

To reflect the setting to the WiComm-1, click the **[Save & Reboot]** on the Save & Reboot button on the Save & Reboot page.

The screenshot shows two sections of the configuration interface. The first section, titled 'Save and Reboot', has a dark header and contains the text: 'All your configuration changes will be saved on WICOMM-1' and 'Your configuration changes will be in effect after the device reboots automatically.' Below this text is a button labeled 'Save & Reboot'. The second section, titled 'Reboot without Saving', also has a dark header and contains the text: 'All your configuration changes will be lost.' and 'Your last saved configuration will be in effect after the device reboots automatically.' Below this text is a button labeled 'Reboot Only'.

Figure 7-27. Ad-Hoc Mode Save & Reboot

If the WiComm-1 is rebooted, the wireless LAN IP is changed into the IP set in Wireless Network Configuration on the Networks Settings submenu. Before accessing the WiComm-1, perform the ping test with the PC equipped with a wireless LAN card. If the ping test is normally performed, the wireless LAN of the WiComm-1 is normally working.

Now, the setting for the WiComm-1 is completed.

Note

Before starting the ping test, a user should access as sysbas, which is the SSID of the WiComm-1, from a PC or a device equipped with a wireless LAN. If a user sets a certain SSID, the user can access by using the SSID selected.

7.4.6 Serial Loopback Test

If the above setting is completed and the ping test is normally is performed, connect the serial port of the WiComm-1 to Loopback. (Connect receive/transmit pins. e.g., connect pin 3 to pin 5 for RS232 communication).

After that, install the Com Redirector program contained in the CD provided to use the serial port of the WiComm-1 like the serial port of a PC.

Connect the COM port registered as the serial port of the WiComm-1 by using the serial communication emulator program and perform the test.

Note

For detailed installation method of the Com Redirector program, refer to the Com Redirector Installation Manual contained in the CD provided.

7.5 Security Setting

7.5.1 WEP Mode

Click Wireless Settings on the Setup menu. If a window appears as shown in *Figure 7-28. WEP Security Setting*, Set Security Mode to **WEP 64Bit Encryption**.

Wireless Network Configuration	
Wireless Mode	Ad-Hoc Help
Wireless Network Mode	802.11 b/g Mixed Help
Wireless Network Name(SSID)	sysbas Help
Channel	4 Help
Bitrate	Auto Mbps Help
RTS Threshold	0 byte(s) Help
Fragment Threshold	0 byte(s) Help
802.11h	Disable Help

Wireless Roaming	
Wireless Roaming enable	Disable Help

Wireless Security	
Security Mode	WEP 64bit Encryption Help
Passphrase	<input type="text"/> Generate Help
Default Key	1 Help
Key 1	<input type="text"/>
Key 2	<input type="text"/>
Key 3	<input type="text"/>
Key 4	<input type="text"/>

Figure 7-28. WEP Security Setting

After that, enter the WEP 64Bit Key value of a wireless AP. This document uses 1122334455 as the WEP 64Bit Key value of an AP.

Note that 0x should be added to the front of the key value. After entering the value as shown in [Figure 7-29. WEP 64Bit Key Value Setting](#), press the **[Submit]** button.

Wireless Security	
Security Mode	WEP 64bit Encryption Help
Passphrase	<input type="text"/> Generate Help
Default Key	1 Help
Key 1	0x1122334455 <input type="text"/>
Key 2	<input type="text"/>
Key 3	<input type="text"/>
Key 4	<input type="text"/>

Figure 7-29. WEP 64Bit Key Value Setting

Note

For WEP setting, the key value of the AP should be known in advance.
The setting of WEP 128-bit is the same as the above setting.

Chapter 8.Appendix

8.1 Updating Firmware

The WiComm-1 can be uploaded via Web, FTP, TFTP, etc. For the update via Web, refer to '[Chapter 5. Setting via Web.](#)'

[illegible]

Figure 8-1. Example of the Update via FTP

Firmware Update via Telnet

1. After accessing the WiComm-1 via Telnet, enter the user name and the password. After the WiComm-1 is connected, ftp is enables with the [set ftp on] command.
2. After opening the Command Prompt window, move to the folder with the firmware file (WiComm-11_FS_10b.bin).
(The figure below shows the case that the firmware file is saved in a folder with the path of C:\WiComm-11_firmware.
3. Access the folder by using an FTP command. (GUI-based FTP client is available).
4. Enter 'WiComm-1' and '99999999' as the user name and the password, separately.
5. Enter the [cd /var] command to move to the directory where file upload is available. Other directories do not allow writing because of security.
6. Enter the [bin] command for the transmission of a binary file or the [hash] command for setting the view of transmission status.
7. Call the [put WiComm-11_FS_10b.bin] to start the upload of the file.
8. If the transmission completion message appears, disconnect the connection by using the [quit], [by] or [bye] command.

```

C:\ 명령 프롬프트

WICOMM-1 login: wicomm
Password:

BusyBox v1.4.2 <2007-07-09 15:46:38 JST> Built-in shell <ash>
Enter 'help' for a list of built-in commands.

/var/home # cd /var
/var # ls
config          lock            state
config.cfg      log             tmp
etc             net             usr
home           run            wicomm1_FS_10b.bin
/var # setup update wicomm1_FS_10b.bin
Erased 2688 Kibyte @ 0 -- 100% complete.
190: Got device: /dev/mtd2
196: Got filename: wicomm1_FS_10b.bin
284: Erased 2621440 / 2600960k bytes
332: Wrote 2600960 / 2600960k bytes
377: Verified 2600960 / 2600960k bytes

/var #
/var #

호스트에 대한 연결을 잃었습니다.

C:\wicommm1_firmware>

```

Figure 8-2. Firmware Update via Telnet

9. Move to the Telnet window.
10. Move to the folder ('cd /var') where the file is downloaded by using FTP.
11. Execute the [ls] command to check if the firmware file exists in the directory.
12. By using the [setup update WiComm-11_KR_10b.bin] command, progress a task to load the new firmware to the flash memory. This task is case sensitive. Perform the spelling check again.
13. Check if the [Erase / Write / Verify] process is successfully performed.
14. If the firmware is successfully updated, the WiComm-1 is restarted automatically.

8.1.1 Firmware Update via TFTP

The update of the firmware via TFTP requires the pre-installation of the TFTP server on a PC.

1. Execute the TFTP program and register the location of the folder with the firmware to the TFTP server as shown in [Figure 8.3](#). Check if the firmware file to be updated exists in the current directory. (The following figure shows the case that the firmware exists in the root directory of C drive.


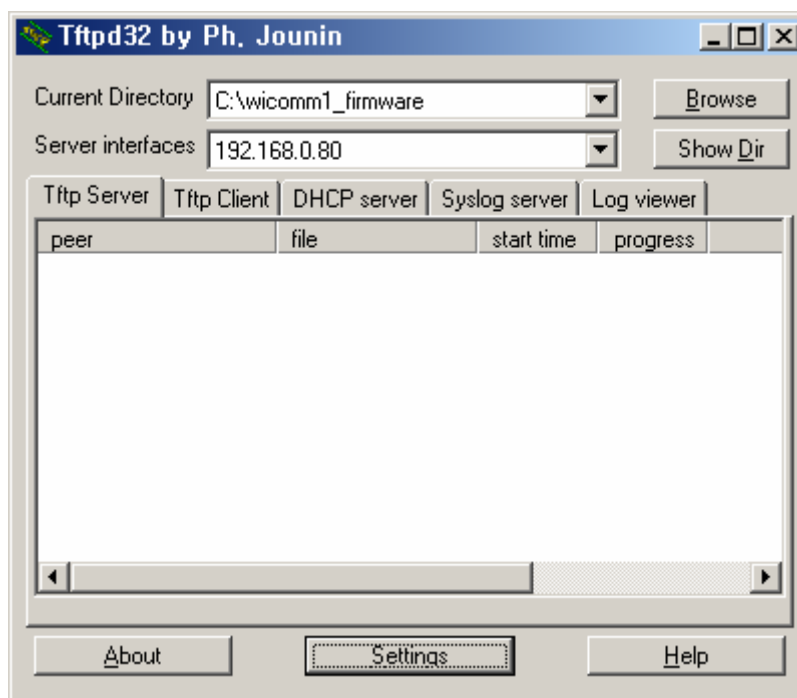


Figure 8-3. Firmware Update via TFTP

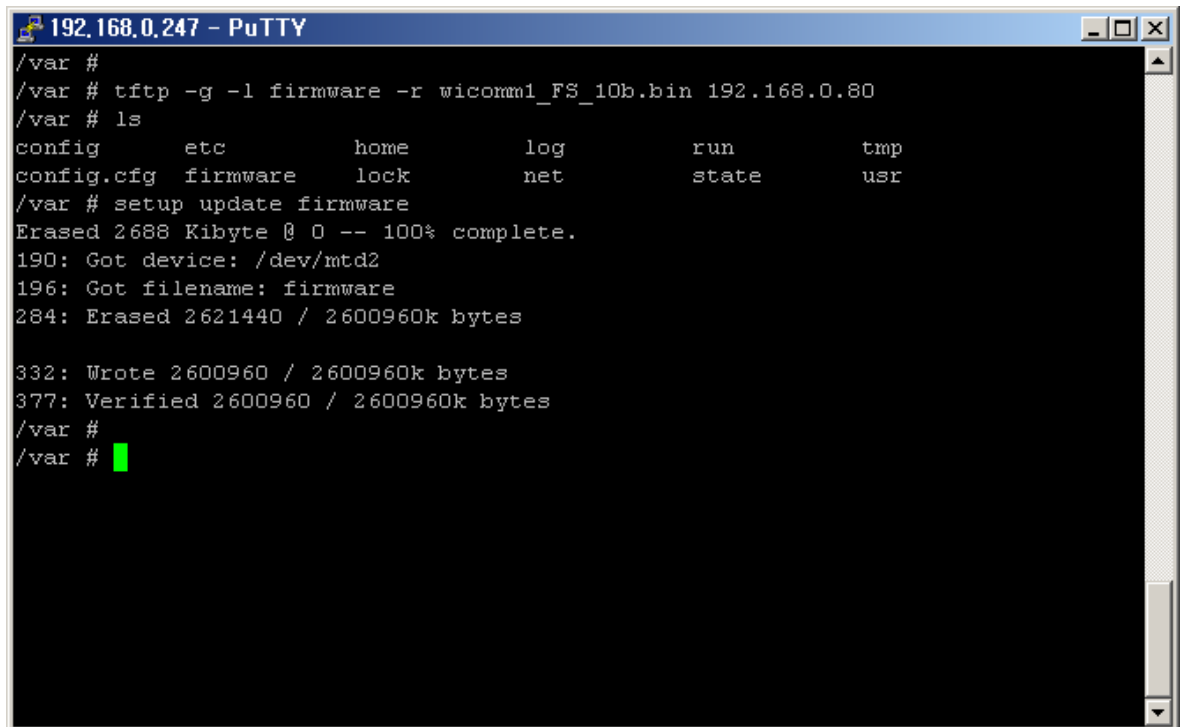

```
192.168.0.247 - PuTTY
/var #
/var # tftp -g -l firmware -r wicomm1_FS_10b.bin 192.168.0.80
/var # ls
config      etc          home         log          run          tmp
config.cfg  firmware    lock         net          state        usr
/var # setup update firmware
Erased 2688 Kibyte @ 0 -- 100% complete.
190: Got device: /dev/mtd2
196: Got filename: firmware
284: Erased 2621440 / 2600960k bytes

332: Wrote 2600960 / 2600960k bytes
377: Verified 2600960 / 2600960k bytes
/var #
/var #
```

Figure 8-4. Firmware Update via TFTP (Command Prompt Screen)

2. Enter the user name and the password.
3. If the prompt appears, enter the following command to download the firmware from the TFTP server.
`tftp -g -l firmware -r WiComm-11_FS_xxx.bin 192.168.0.80`
- Download the firmware of [WiComm-11_FS_xxx.bin] registered in the TFTP server to '/var' in the WiComm-1 as the file name of 'firmware'.
- [192.168.0.80] is the IP address of the PC where the TFTP server program is running.
4. If the TFTP transmission is successfully completed, nothing is displayed on the screen.
5. Execute the [ls] command to check if the firmware file exists in the directory.
6. By using the [setup update firmware] command, progress a task to load the new firmware to the flash memory.
This task is case sensitive. Perform the spelling check again.
7. Check if the [Erase / Write / Verify] process is successfully performed.
8. Execute the [exit] command to end Telnet and reset the system power.

8.2 Troubleshooting

This section presents troubleshooting for various problems that may occur while using the system. This section deals with the problems covering the following categories:

- Installation Problem
- Network setting problem
- Port setting problem
- Wireless network setting problem

8.2.1 Troubleshooting for Installation

If you cannot access a device connected via the WiComm-1, it is better to check the network connection and cables first.

- Check if all cables are correctly connected. (Ethernet or DB-9 serial cables)
- Check if 127 V adapter provided is used as the power adapter.
- If the LED status is abnormal, it may be caused by a problem from 10baseT or 100baseT cable, or a hub port. The reconnection with another cable or hub port or the connection of another device to the cable may help you analyze the cause of the problem.
- Check if all IP addresses and port numbers are correctly entered.
- If a hub is being used, check if hub ports are normally working by connecting the WiComm-1 to another port.

8.2.2 Troubleshooting for Setting Networks

- If TCP/IP is used, check if the PC and the WiComm-1 exist on the same network. (Check the connection with the WiComm-1 by running the ping command on the PC). The IP address of the WiComm-1 should exist on the same logical network as the host computer. For example, if the IP address of the PC is 192.189.207.3 and the subnet mask is set to 255.255.255.0, the IP address of the WiComm-1 should be set to 192.189.207.x (x is an integer between 1 to 254). In addition, check if the address of the default gateway is correctly assigned.
- If the IP address the WiComm-1 is automatically assigned through a DHCP server, the WiComm-1 IP address may be changed. A fixed IP address is assigned when the DHCP server assigns a permanent IP address to the WiComm-1 or the fixed IP address assignment is set in the WiComm-1.
- A problem may occur from an incorrect or duplicate IP address. Check if the IP address is assigned to the WiComm-1 correctly and if the IP address is assigned to another device on the network. In TCP/IP connection, IP address confliction is the most frequent problem. If the IP address is incorrect, it may be the problem of the device connection.
- Check if the PC and the WiComm-1 are using the same subnet mask. (For example, if the WiComm-1 uses the subnet mask of 255.255.255.0, the computer should use the same subnet mask). In addition, check if the default gateway is set correctly.
- If an incorrect IP address is assigned, find the DHCP server and check if the DHCP server assigned incorrect IP address to the WiComm-1.

8.2.3 Troubleshooting for Setting Ports

- If a PC is not connected to a target device, check the connection status by using the PING x.x.x.x command (x.x.x.x is the IP address of the WiComm-1) on the command prompt. If the ping test is not performed correctly,

the PC cannot access serial devices.

- If a problem occurs while using the COM port redirector (emulator) function, check if the correct virtual port is used while an application program is running. Check if the virtual port is specified correctly in the COM port setting of the application program.


8.2.4 Troubleshooting for Setting Wireless Networks

- Check if a wireless adapter (for wireless communication of a PC) or wireless AP of the PC is set correctly. Check if the setting for wireless mode, SSID, WEP or other security, or IP address is correct.
- Check if the sensitivity of wireless signals is sufficient or the WiComm-1 is out of wireless communication range (about 90 m).
- After generating wireless signals through Bluetooth device, wireless phone or electronic microwave, check if the WiComm-1 is closed to a device with the risk of interference.
- Check if wireless communication mode, such as Infrastructure mode requiring the connection of an AP and Ad-Hoc mode that AP is not necessary, is set correctly.
- If the wireless network is protected by using WEP encryption algorithm or password security, many wireless adapters or APs may use passwords or Passphases. At this time, 10-digit key (40-bit or 64-bit WEP) or 26-digit key (128-bit WEP) should follow the prefix, "0x" in hexadecimal format.
- If the communication is slowed or disconnected from time to time, change the wireless network channel. The channel can be changed via Web interface or Telnet. For addition information, refer to the documents concerned with wireless adapter or AP. When changing the channel, it is recommended to select a channel that is 3-channel higher or lower than other wireless channels in use on the current wireless network.

8.3 Product Specifications

Table 8-1. Product Specifications

Item	Category	Specification
Network	Communication Standard	802.11b/g Wireless, 802.3i(10Base-T) 802.3u(100Base-TX) Ethernet
	Security Protocol	WEP-64Bit/128Bit
	Communication Speed	Max 54Mbps
	Protocol Supported	TCP, ARP, Telnet, ICMP, SNMP, DHCP, BOOTP, Auto IP, HTTP, SMTP, TFTP, SLP, DNS, Dynamic DNS
	LAN Port	10/100Mbps RJ-45 Port * 1
	Network Connection	Static IP, DHCP
	Additional Function	Roaming
Hardware	CPU	32-bit ARM9 Processor with 168MHz
	Flash Memory	4 MB
	SDRAM	8 MB
	LED	Ready, Wi-Fi, Power, LAN Interface LED: RS232/422/485
	Input Power	9V~48V (Provision of the power through DC adapter, terminal block and RI pin)
	Power Consumption	6W
	Size	71.9(W) X 107.5(L) X 25.2(H)mm
	Weight	
Serial	Port	1 (DB-9 Male)
	Interface	Selectable RS232/RS422/RS485
	Speed	Max 921.6 Kbps
	Signal Line	TX, RX, DTR, DSR, CTS, RTS, DCD
Serial	Overcurrent Protection	15KV Surge Protection for all signals
	UART	16C550 with 16 byte FIFO (Eddy-S1/Pin, S1/TTL, S1/DB9) 16C1054 with 256 byte FIFO (Eddy-S2/Pin only)
	Data Bits	5, 6, 7, 8
	Stop Bits	1, 2
	Parity	None, Even, Odd

Item	Category	Specification
	Flow Control	RTS/CTS, Xon/Xoff
Environm ent	Operating Temperature	0 ~ 50°C
	Conservation Temperature	-20 ~ 70°C
	Humidity	10% ~ 95% Non-Condensing
Software	O/S	Embedded Linux (Kernel 2.6.x)
	Administration Tool	SNMP, Portview, Web
	Environment Setting	Telnet, Web, Portview
	Security	Telnet, Web ID/Password, SSH, SSL/TLS
	Firmware Upload	TFTP, FTP, Web
	Web Service	Embedded Web Server
	COM Port Redirection	SystemBase COM Port Redirector for Windows 98/ME/2K/XP/2003
Authentic ation	CE Class A, FCC Class A, RoHS compliant	

8.4 FCC Statement

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.
- (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED.
- (3) INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

FCC RF

INTERFERENCE STATEMENT

NOTE:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.
